


PORODict

User Guide

GeoDict release 2022

Published: January 4, 2022

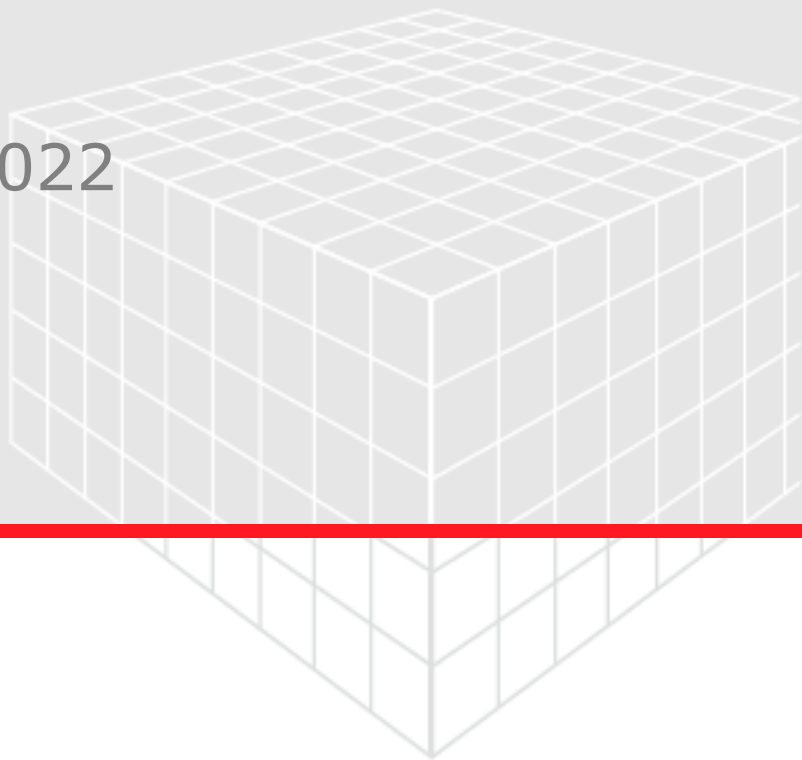

GEODict

CALCULATING PORE STRUCTURE CHARACTERISTICS 1

THEORETICAL BASIS: COMPUTATION OF PORE SIZES BY GRANULOMETRY OR POROSIMETRY 3

Granulometry 3

Porosimetry 4

PORE SIZE DISTRIBUTION (GRANULOMETRY) 5

Pore Size Options 5

Material Density 7

Results 7

Data Visualization 10

PORE SIZE DISTRIBUTION (POROSIMETRY) 12

Results 12

Data Visualization 13

Speed-up through parallelization 13

IDENTIFY PORES 15

Pore Segmentation 15

INITIALIZATION 15

PORE-FRAGMENT RECONNECTION 18

DOMAIN-BOUNDARY OPTIONS 20

PORE-SHAPE ANALYSIS 20

Output Options 22

Pore Identification results 23

INPUT MAP 23

RESULTS 24

PORE VISUALIZATION 30

CREATE VIDEOS 31

OPEN AND CLOSED POROSITY 33

Results 34

Data Visualization 34

BUBBLE POINT 36

Results 37

Data Visualization 40

PERCOLATION PATH 41

CHORD LENGTH DISTRIBUTION 41


GEODESIC TORTUOSITY 41

PREDEFINED 42

CALCULATING PORE STRUCTURE CHARACTERISTICS

PorDict estimates the pore structure characteristics on three-dimensional models of porous media obtained from a μ CT or FIB/SEM image or from a 3D model generated with **GeoDict**.

PorDict starts by selecting **Analyze** → **PorDict** in the menu bar. The available commands can be selected from the pull-down menu in the **PorDict** section.

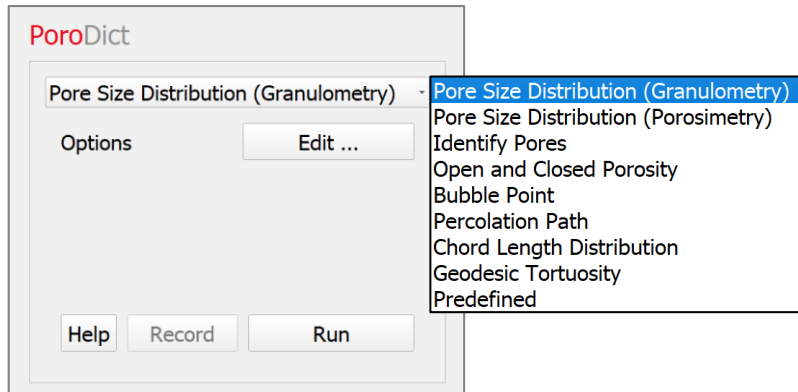

More commands were available in previous **PorDict** versions. These commands (Estimate Surface Area, Estimate Three-Phase Contact Line, Minkowski Parameters, Euclidean Distance Transform) can now be found in **MatDict**. Since **GeoDict** 2021 **PorDict**'s functionality includes:

- In the calculation of the **Pore Size Distribution (Granulometry)**, the algorithm used to determine the size of a pore does not distinguish between through pores, closed pores and blind pores and is in this sense purely geometrical. A pore radius is determined by fitting spheres into the pore volume. To be more precise, a point belongs to a pore of radius larger than r , if it is inside any sphere of radius r , which can be fitted into the pore space.
- **Pore Size Distribution (Porosimetry)** measurements like Mercury Intrusion Porosimetry (MIP) or Liquid Extrusion Porosimetry (LEP) measure the pore sizes of a media by pressing a non-wetting liquid or gas into the medium and registering applied pressure and absorbed volume. The pressure applied is related to the radius of the pores accessible to the non-wetting liquid, which gives a size distribution of the pores. Due to this method, and in contrast to the approach above, closed pores do not contribute to the pore volume at all. The other pores only contribute to the pore volume fraction if connected to the non-wetting phase reservoir (e.g. the mercury reservoir).
- To **Identify Pores** through the Watershed algorithm is especially useful to optimize mechanical and transport properties in foams and other structures with joined pores. The method introduces a segmentation of the pores, based on a distance transform, which identifies the number of pores, as well as the pore volume. This analysis is also very important to study the complex interconnected pore-space in μ CT scans of rocks.
- Determination of **Open and Closed Porosity**. In the study of mechanical properties and structural integrity of porous materials, it is important to establish the pore morphology of the porous material. Morphological factors to be determined are the amount and percentage of open and closed pores, and the

total pore volume percentage. Open pores are extensive networks of interconnected pores, leading from the surface to the core in any of the Cartesian directions. In contrast, isolated pores which do not open to the surface in any direction are referred to as closed pores.

- **Bubble point** pressure is defined as the pressure at which the first bubble appears while increasing pressure on a sample. The bubble point test is done to determine the minimum pressure required to force the fluid out of the largest pore. The bubble point pressure, calculated by PoroDict, must be sufficient to overcome the surface tension of the fluid and it is a direct measure of effective pore diameter.
- For the calculation of **Percolation Paths**, the method determines the maximal diameters of spherical particles that can move through the medium. In addition, the shortest paths of the largest particles are calculated and displayed. Furthermore, the shortest path of a given sphere size through the medium can be computed.
- A **Chord Length Distribution** (CLD) is the distribution of the length of a typical chord of a structure. By being essentially unique for any given geometry class, it is a highly precise and sensitive measure to compare the geometries of porous media. The calculation of CLD is particularly useful in 2D tomographic cross-sections, for which the pore size distribution cannot be determined by Granulometry or by Porosimetry.
- The **Geodesic Tortuosity** command computes the tortuosity of paths crossing the material, either through pore space or through solid materials. For every voxel on the outflow plane, the algorithm finds the shortest path through the selected material.
- The **Predefined** section contains additional Python macros deployed with GeoDict which are either scripting examples or add-ins for specific applications.

THEORETICAL BASIS: COMPUTATION OF PORE SIZES BY GRANULOMETRY OR POROSIMETRY

The computation of a pore size distribution requires a definition of what is understood under the term “pore size”. While the definition of diameter for a spherical pore is clear, it is not obvious what is the diameter of a pore for arbitrary 3D geometries.

PorDict uses the following assertion when defining a pore diameter:


A voxel is part of a pore with a diameter equal or larger than D , if it is included in a sphere of diameter D , which is completely included in the pore space.

The superposition of all spheres with diameter D that can be included in the pore space is equal to the pore volume of all pores of diameter D or larger.

So, if a sphere of diameter 18 μm can be found that contains a certain voxel, but no sphere of diameter 20 μm can be found that contains this voxel, this voxel belongs to a pore with a diameter between 18 μm and 20 μm . In other words, the largest sphere that contains this voxel, and fits into the pore space, defines the pore diameter to which the voxel belongs.

GRANULOMETRY

The following images illustrate (in 2D) how pore diameters are computed by *granulometry* in **PorDict**.

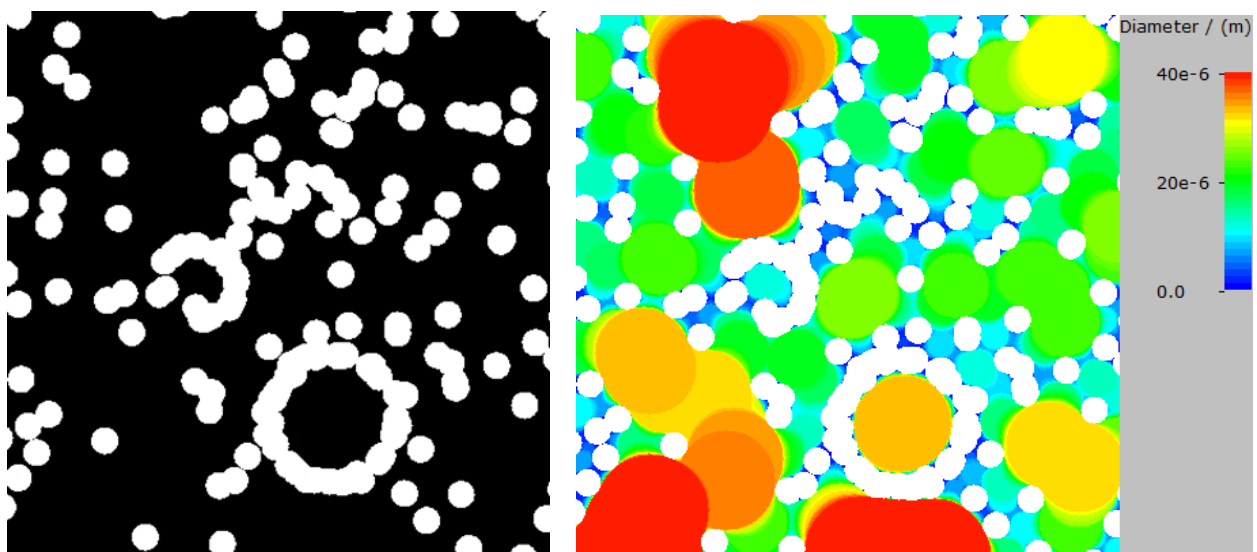

The left image shows a structure with the solid material shown in white and the pore space in black. The image on the right shows the pore volume with diameters colored gradually. The red pore volume describes a pore volume with diameters around 40 μm and larger, green shows areas with diameters around 20 μm and very small diameters are colored in blue.

As shown in this illustration, the pores found by granulometry can be isolated inside the structure, and no connectivity or accessibility to the faces of the structure is required.


POROSIMETRY

When measured by *porosimetry* in laboratory tests (e.g. mercury intrusion porosimetry or liquid extrusion porosimetry), the isolated pores are not measured as large pores, because they lay hidden to the outside world behind small bottlenecks and are, therefore, only measured as having the diameter of the bottleneck by the measurement devices.

Consequently, the computed pore size distribution *by porosimetry* takes the connectivity of the pores into account. In this case, the definition of what is a pore diameter changes slightly in PoroDict:

*A voxel is part of a pore with a diameter equal or larger than D , if it is included in a sphere of diameter D , which is completely included in the pore space **and can be moved in through the pores from a face of the structure.***

The following images illustrate (in 2D) how pore diameters are computed *by porosimetry* in PoroDict.

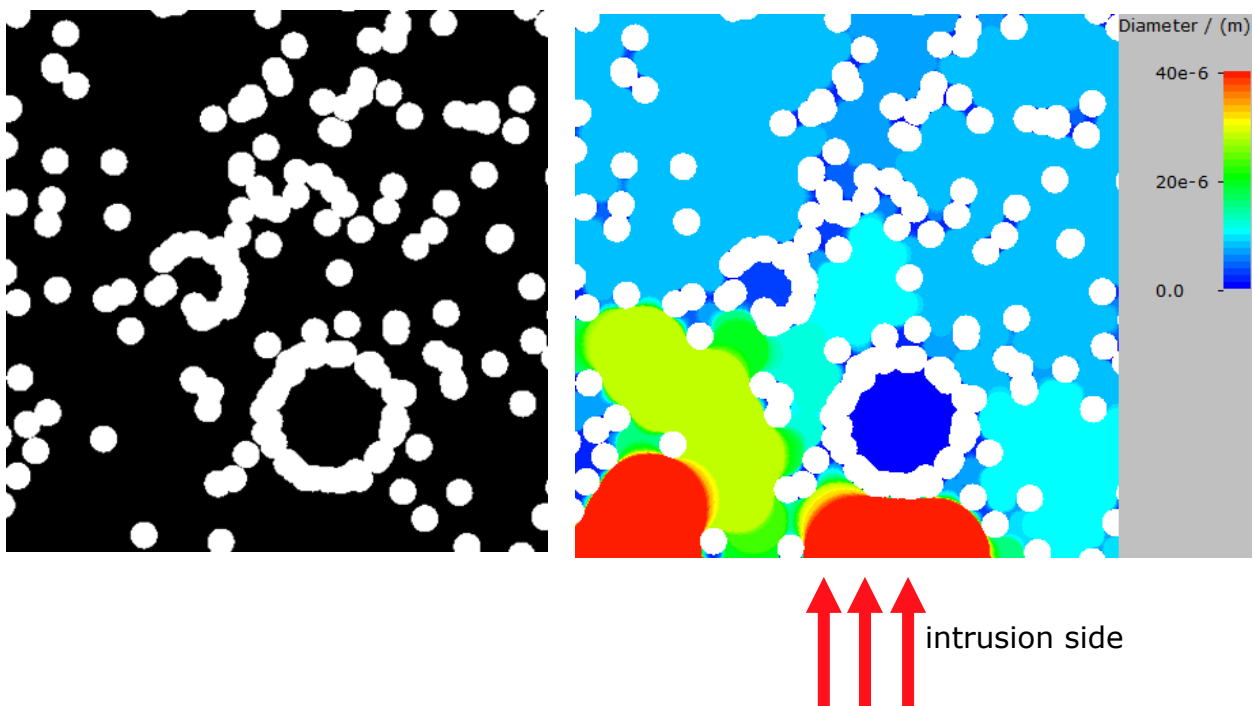


The left image shows a structure with the solid material shown in white and the pore space in black. The image on the right shows the pore volume with diameters colored gradually. The red pore volume describes a pore volume with diameters around 40 μm and larger, green shows areas with diameters around 20 μm and very small diameters are colored in blue.

As shown in this illustration, the pores found by porosimetry must be connected to the non-wetting phase intrusion sides of the image (in this example Z-, i.e. the bottom of the image).

PORE SIZE DISTRIBUTION (GRANULOMETRY)

After selecting **Pore Size Distribution (Granulometry)**, the needed parameters can be entered by clicking the **Options' Edit...** button. The Pore Size Distribution dialog includes the **Pore Size Options** and the **Material Density** tabs.

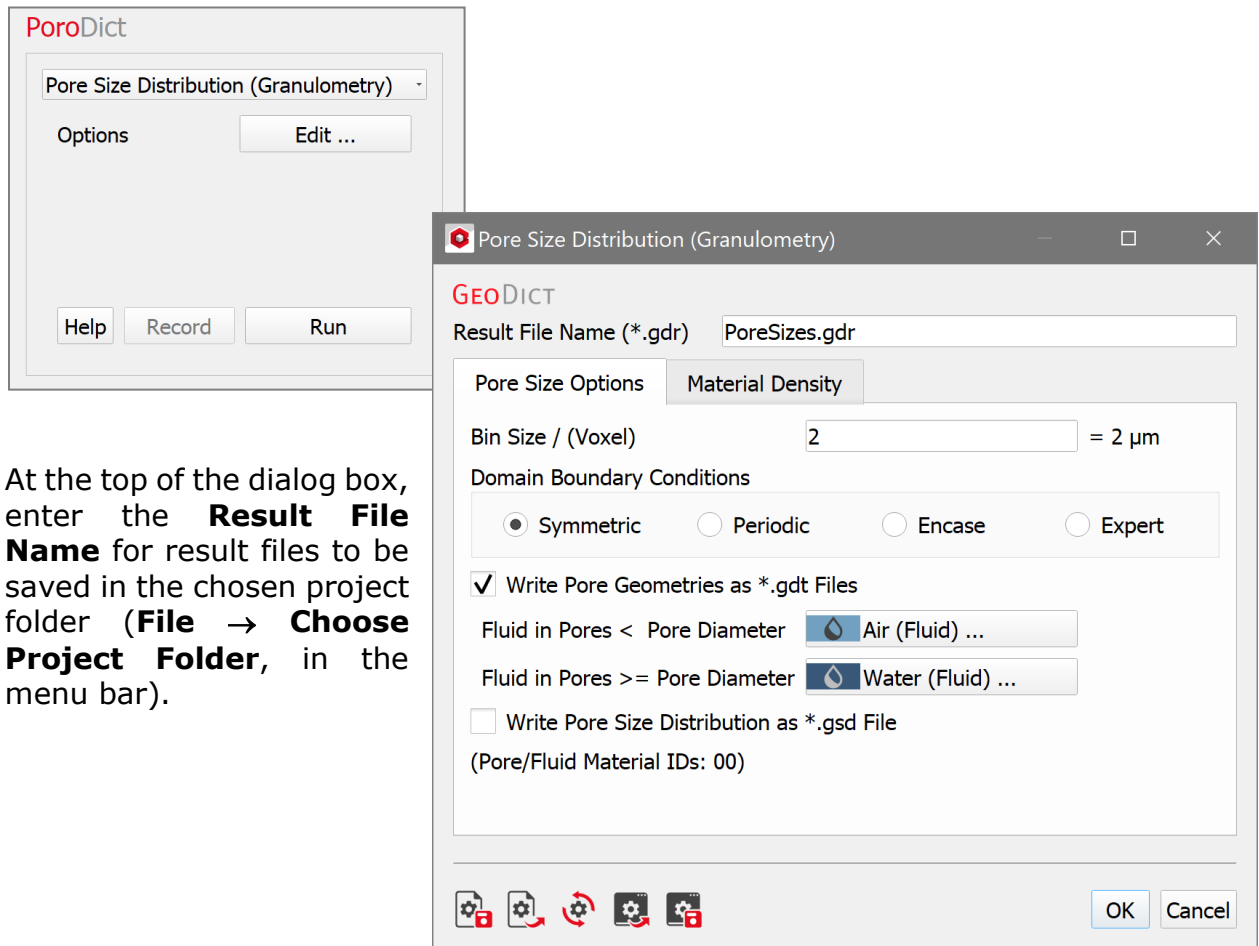

At the top of the dialog box, enter the **Result File Name** for result files to be saved in the chosen project folder (**File** → **Choose Project Folder**, in the menu bar).

PORE SIZE OPTIONS

The **Bin Size** can be entered (or modified). The bin size units are voxels and their equivalent in metric length units is shown. The pores are classified by their diameter into bins that have the **Bin Size** entered in the box. All bins are of equal size and each contains pores with a diameter in the range comprised between $[(i - 1) \times \text{Bin size}]$ and $[i \times \text{Bin size}]$, being i the bin number.

For example, when analyzing a porous structure with a voxel size of 1 μm , the user can set the **Bin Size** to 2 or to 4 (voxels) which would come to classify the pores by their diameter in ranges of 2 μm or 4 μm , and would result in:

Bin number (i)	Pore diameter between [(i - 1) x Bin size] - [i x Bin size]	
	Bin Size 2 μm	Bin Size 4 μm
1	0 μm - 2 μm	0 μm - 4 μm
2	2 μm - 4 μm	4 μm - 8 μm
3	4 μm - 6 μm	8 μm - 12 μm
..	...	

When choosing the **Bin Size**, be aware that the underlying algorithm to compute the Euclidean distance operates directly on the voxel grid. Thus, the smallest possible distance between two grid points is 1 Voxel, which corresponds to a pore radius of 1 Voxel. Thus, the smallest pore diameter that the algorithm will find is 2 Voxels.


In general, the error made when computing the pore size distribution is of the same order of magnitude as the discretization error of the structure, i.e. 1 Voxel.

The **Domain Boundary Conditions** can be chosen to be **Symmetric**, **Periodic**, **Encase**, or any combinations of those boundary conditions in all three directions with the choice of **Expert**.

Choosing the appropriate boundary condition depends on the structure's design.

For example, imagine a structure with a cross-section as shown in (a). For the three boundary condition options shown in (b), (c) and (d) the resulting pore size is visualized in blue.

- If the geometry has mirror symmetry (b), **Symmetric** boundary conditions are taken, which would be a good approximation e.g. for a cut-out from a CT image.
- If instead the expected pattern of the geometry is repeated in all directions (c), the pore sizes are computed with **Periodic** boundary conditions. That has the effect that the structure's objects and pores ending on one side of the structure reappear in the opposite side.
- If the structure is encased in a closed wall (d), the **Encase** boundary conditions are used.

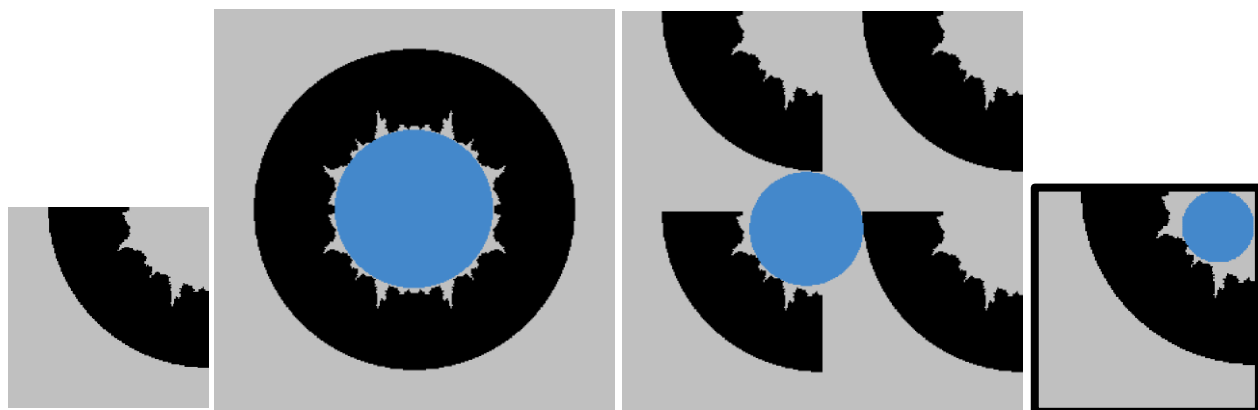


(a)

(b)

(c)

(d)

When different boundary conditions need to be specified for the three directions, the choice of **Expert** should be used. When **Expert** is checked, more choices appear. For example, the boundary conditions could be chosen to be **Encase** in X-direction, **Symmetric** in the Y-direction and **Periodic** in Z-direction.

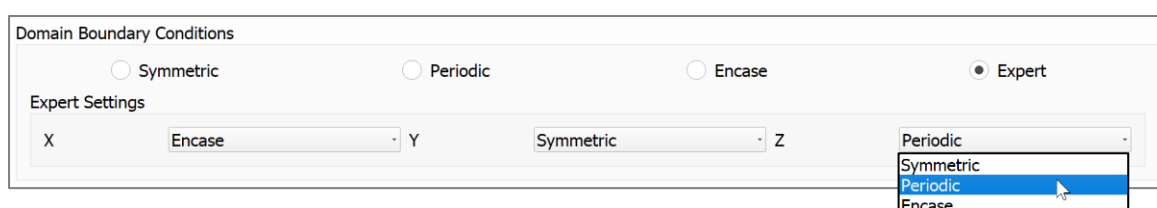

When **Write Pore Geometries as *.gdt Files** is checked, files in .gdt format are saved in the automatically created results folder (e.g. .../PoreSizes-Granulometry/...) inside the project folder (see page 10). The number of these *.gdt files reflects the number of pore size steps and depends on the entered **Bin Size**. A large bin size results in fewer size steps, and thus, fewer *.gdt files are saved for the visualization. The materials written into these *.gdt files can be specified after checking **Write Pore Geometries as *.gdt Files**. For example, predefined materials of the **Material Database**, such as Air or Water can be chosen by clicking on the buttons.

Additionally, when **Write Pore Size Distribution as *.gsd File** is checked, a file with the default name PoreSizeDistribution.gsd, in *.gsd format, is saved in the results folder inside the project folder. The file contains the pore size (diameter of sphere) of each voxel written into a volume field that is used in visualization.

MATERIAL DENSITY

Under the **Material Density** tab, the temperature can be edited and the density of every material present in the structure (in kg/m³ or in g/cm³) must be specified unless they are automatically entered (for constituent materials from the GeoDict Material Database).

RESULTS

At the end of the PSD Granulometry calculations, the results are immediately shown in the opening Result Viewer and the result file is saved with the name entered in **Result File Name** (or the default **PoreSizes.gdr**) in the chosen project folder (**File** → **Choose Project Folder**).


The *.gdr file can also be directly opened, analyzed, and plotted in Microsoft Excel™ using GeoDexcel, after clicking **Export** → **Excel (specific)** at the bottom of the Result Viewer.

The *.gdr file can also be directly opened, analyzed, and plotted in MATLAB® using GeoLab, after clicking **Export** → **Matlab** at the bottom of the result file window.

Under the **Results - Report** subtab, on the right-hand side, the **Characteristic Diameters** are shown. For example, here, the D10 value means that 10% of all pores have a diameter smaller than 1.75 µm. The D50 value means that 50% of all pores have a diameter smaller than 3.55 µm. The D90 value means that 90% of all pores have a diameter smaller than 5.49 µm.

The discretization error is less than 1 voxel, which means for the presented example, that the D10 is 1.75 µm ± 0.4 µm.

Underneath, a detailed table lists Maximum and Minimum Diameters, Volume Fraction, Cumulative Volume Fraction, the Pore Volume, and the Differential Pore Volume Distribution for every bin size.

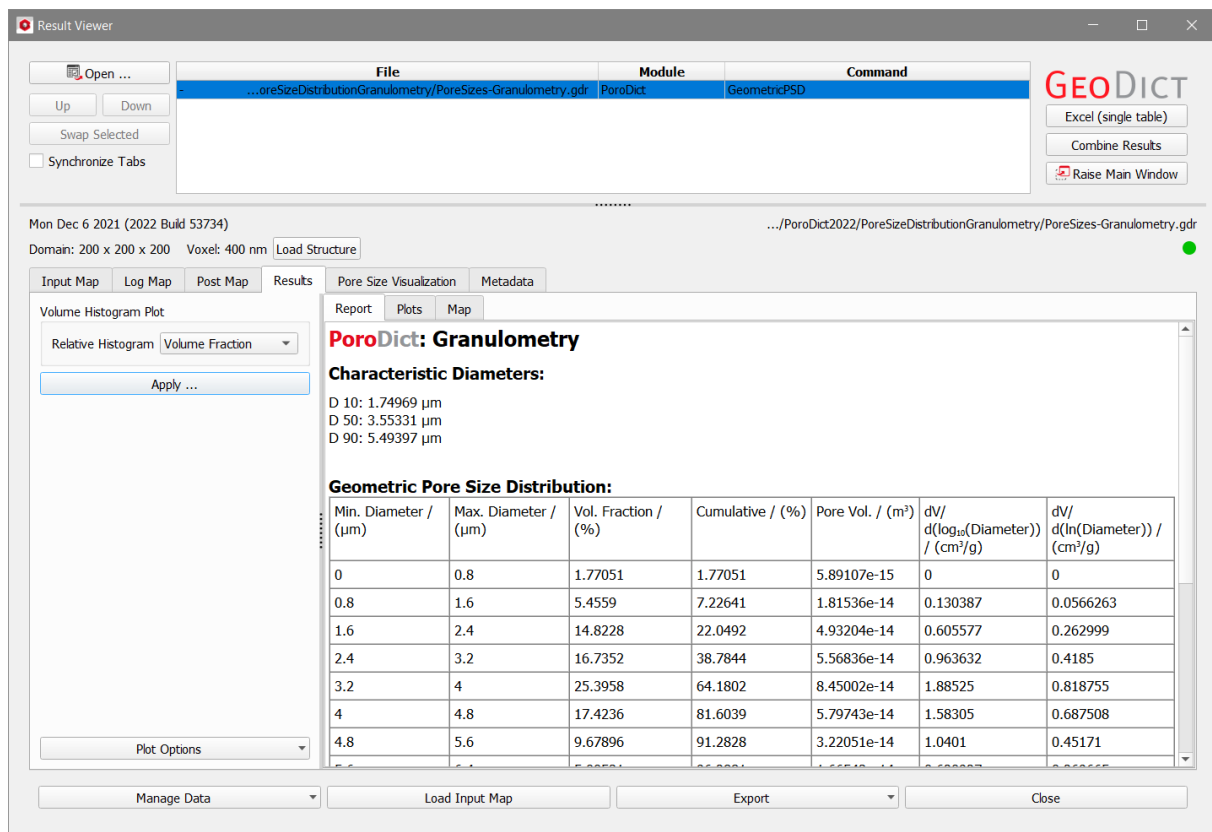



Under the **Results - Plots** subtab, different relative and cumulative histograms can be plotted. The default relative histogram shows the Volume Fraction [%], but the histogram of interest, i.e. Volume, Volume Fraction, or dV/dlog(Diameter) can be chosen on the left-hand side.

The differential pore volume distribution dV/dlog(Diameter) is computed as

$$\frac{V_{cum}(d_{i+1}) - V_{cum}(d_i)}{(\ln(d_{i+1}) - \ln(d_i)) \cdot m}$$


where the d_i are pore diameters, V_{cum} the cumulative volume fractions, and m is the mass of the structure. The mass of the structure is computed using the densities of the solid constituent materials of the sample. This normalization ensures that the value of dV/dlog(Diameter) is independent of the size of the domain.

In the **Volume Histogram Plot** panel on the left-hand side, several histogram types can be selected. After clicking the **Apply ...** button, the plots on the right hand-side change accordingly.

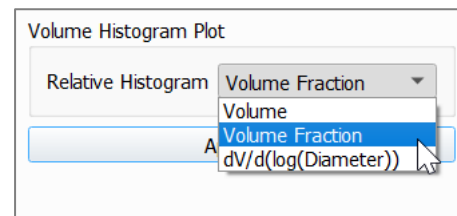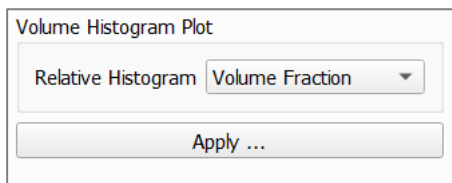

In the **Cumulative Histogram** plot, the red curve shows the volume fraction of pores smaller than a given diameter and the blue curve shows the pores larger than or equal to a given diameter. Both curves sum up to 100% for any given pore diameter.

As usual, the plots can be edited and saved as images or as text files by right-clicking on the graph area.

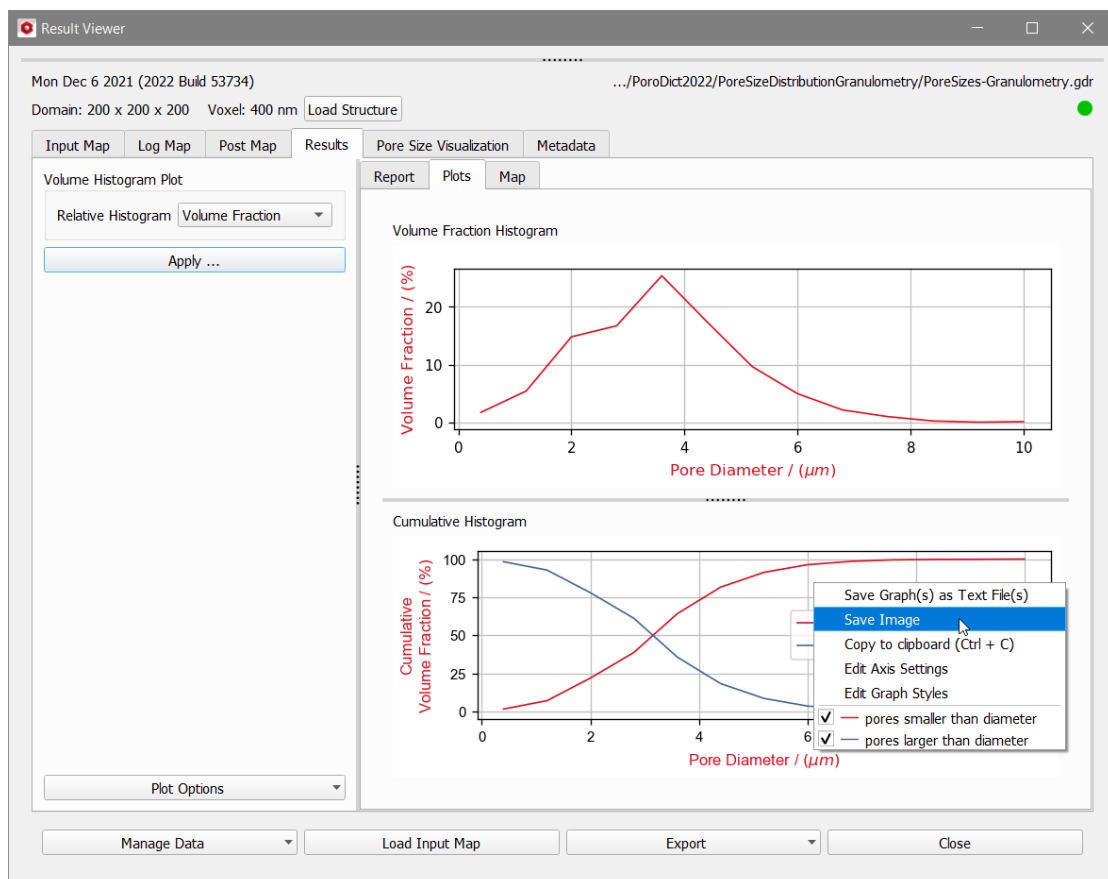


The **Results - Map** subtab gives access to the values of the computed parameters.

Report	Plots	Map		
Key			Unit	Value
MinDiameter			m	0, 8e-07, 1.6e-06, 2.4e-06, 3.2e-06, 4e-06, 4.8e-06, 5.6e-06, 6.4e-06, 7...
MaxDiameter			m	8e-07, 1.6e-06, 2.4e-06, 3.2e-06, 4e-06, 4.8e-06, 5.6e-06, 6.4e-06, 7.2...
MeanDiameter			m	4e-07, 1.2e-06, 2e-06, 2.8e-06, 3.6e-06, 4.4e-06, 5.2e-06, 6e-06, 6.8e...
VolumeFraction			1	0.01770508629, 0.05455900971, 0.1482279718, 0.1673521887, 0.2539...
VolumeAbsolute			m ³	5.891072e-15, 1.81536e-14, 4.9320384e-14, 5.5683648e-14, 8.4500224...
VolumeFractionCumulative			1	0.01770508629, 0.072264096, 0.2204920678, 0.3878442565, 0.641802...
Saturation			1	1, 0.9822949137, 0.927735904, 0.7795079322, 0.6121557435, 0.35819...
Weight			kg	4.62508055e-10
dVdLogDiameter			cm ³ /g	0, 0.05662627582, 0.2629987359, 0.407795079322, 0.6121557435, 0.7795079322, 0.6121557435, 0.3581979312, 0.1839614784, 0.08717189098, 0.03711878419, 0.01531268381, 0.005034278023, 0.00225891419, 0.001573969245
dVdLog10Diameter			cm ³ /g	0, 0.1303868186, 0.6055769688, 0.96...
Fractions			%	10, 50, 90
CharacteristicDiameters			m	1.749693225e-06, 3.553305118e-06, ...
Porosity			1	0.64986975
GSDFile				PoreSizeDistribution.gsd

DATA VISUALIZATION


The distribution of pores is observed in the Volume Fraction/Pore Diameter plot but can also be visualized through the **Pore Size Visualization** tab. To visualize the pore space, the saved GDT file corresponding to a particular pore diameter can be selected. Then, click **Load Pore Geometry**.

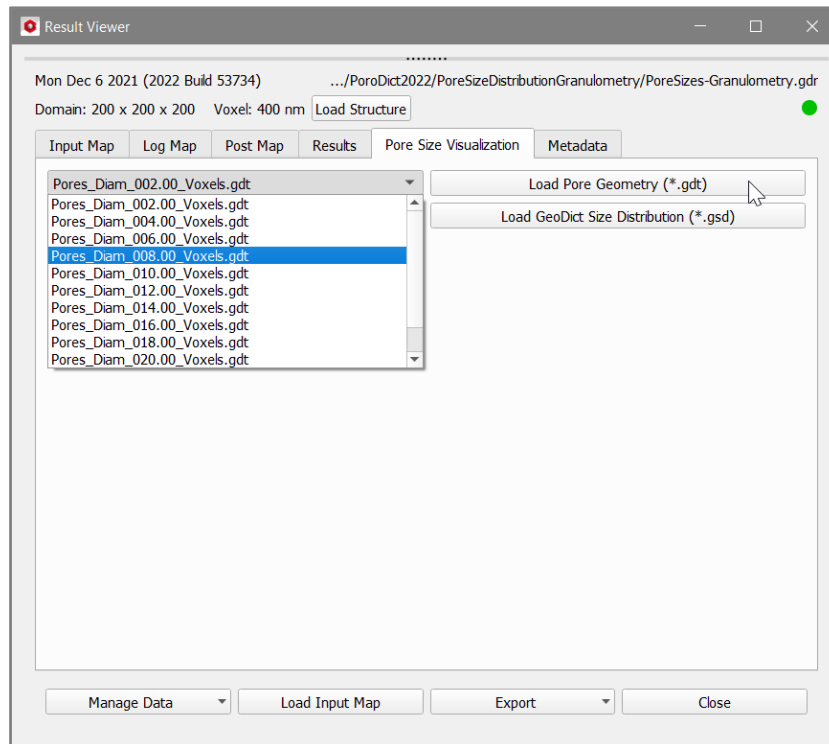


For a Bin Size of 2 μm , for example, the **Pores_Diam_008.00_Voxels.gdt** file shows the pore space in which spheres with a diameter of 8 μm fit.

The **Pores_Diam_016.00_Voxels.gdt** file shows the more limited pore space in which spheres with a (large) diameter of 16 μm would fit.


The **Pores_Diam_020.00_Voxels.gdt** file shows that in this structure, the pore space in which spheres with diameter over 20 μm can fit is very small.

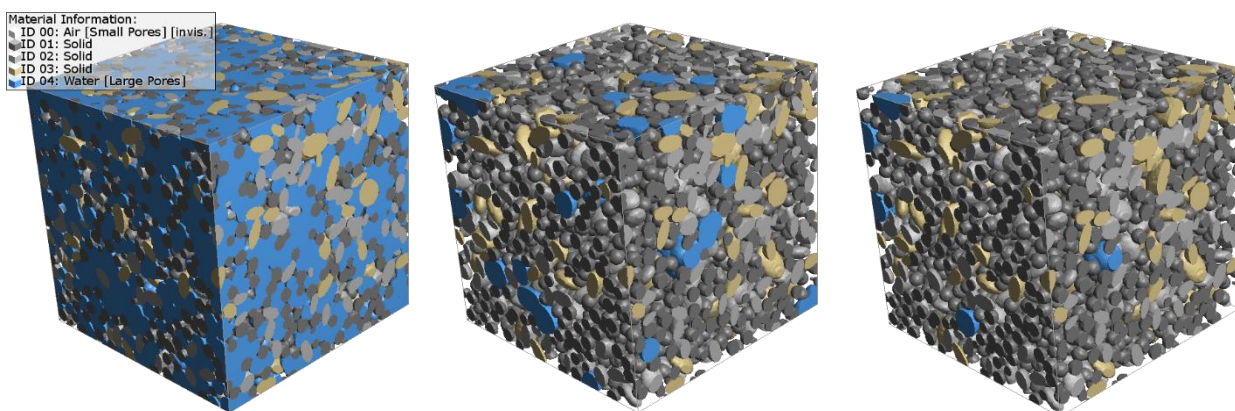

Check or un-check **visible** in **Settings** → **Color & Visibility Settings**, to turn off the materials in the structure (Material ID 01, Material ID 02, and Material ID 03) and see only the pore space filled with water (Material ID 04).

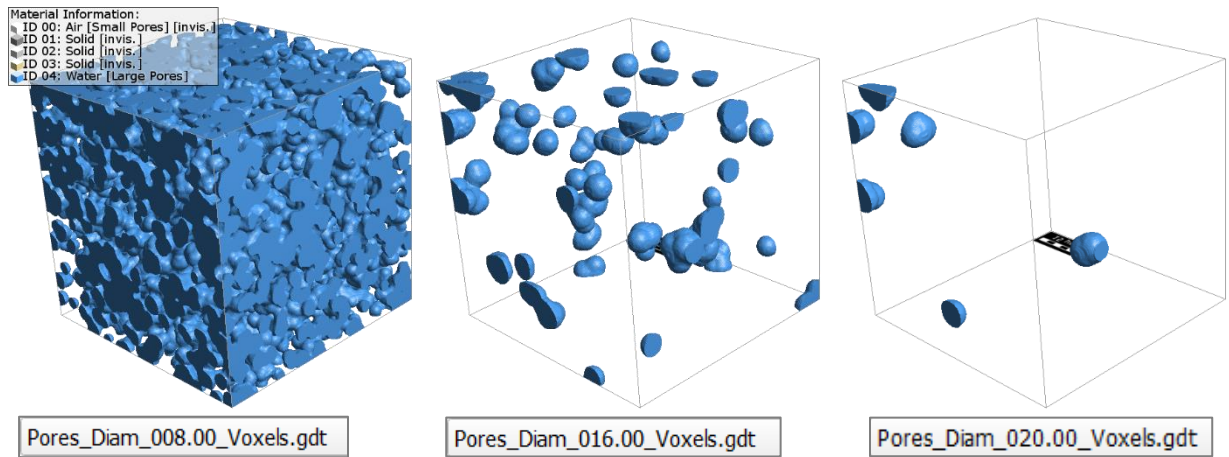


PORE SIZE DISTRIBUTION (POROSIMETRY)

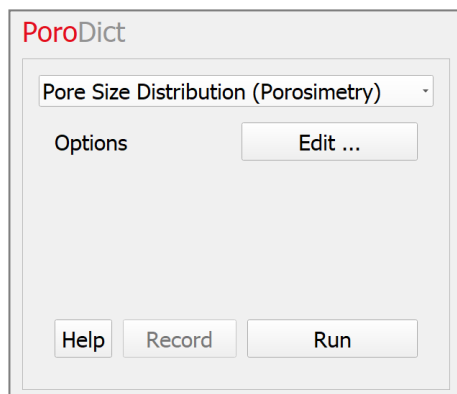

For **Pore Size Distribution (Porosimetry)**, the needed intrusion parameters can be entered by clicking the **Options' Edit...** button. These parameters are similar to those for Pore Size Distribution (Granulometry), explained above in pages [5ff.](#)

Here, also the direction (or multiple directions) from which the application of the intrusion occurs during the simulation can be chosen.

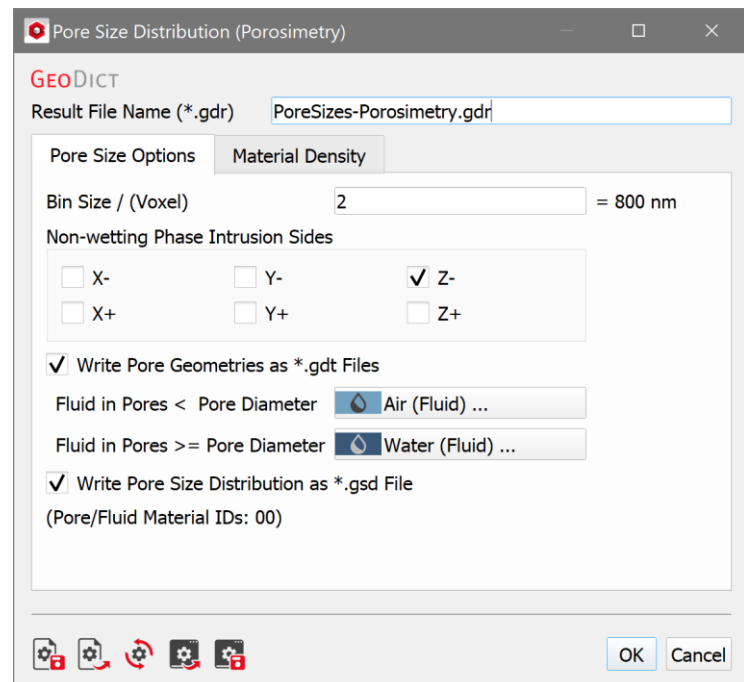

RESULTS

The **Result Viewer** of the porosimetry result file is immediately shown at the end of the calculations. It contains the same information and options as the **Pore Size Distribution (Granulometry)** result file seen above (page [7ff.](#)).


Under the **Results** tab, **Report** subtab, the **Characteristic Diameters** are shown. Here, the D10 value means that 10% of all pores have a diameter smaller than 1.72 μm . The D50 value means that 50% of all pores have a diameter smaller than 2.89 μm . The D90 value means that 90% of all pores have a diameter smaller than 3.85 μm .

Underneath, a detailed table lists Maximum and Minimum Diameters, Volume Fraction, Cumulative Volume Fraction, the Pore Volume, and the Differential Pore Volume Distribution for every bin size.

Less big pores are found by Porosimetry than by Granulometry.

The reason for this is that a big pore in the interior of the volume must be reached from the intrusion sides, usually, through a small diameter pore-throat. The big pore is counted as pore volume of a certain diameter only if a sphere with this diameter can be pushed from the intrusion side, through the pore-throat to reach the big pore.

In other words, Porosimetry provides a measure of the pore-throat distribution.

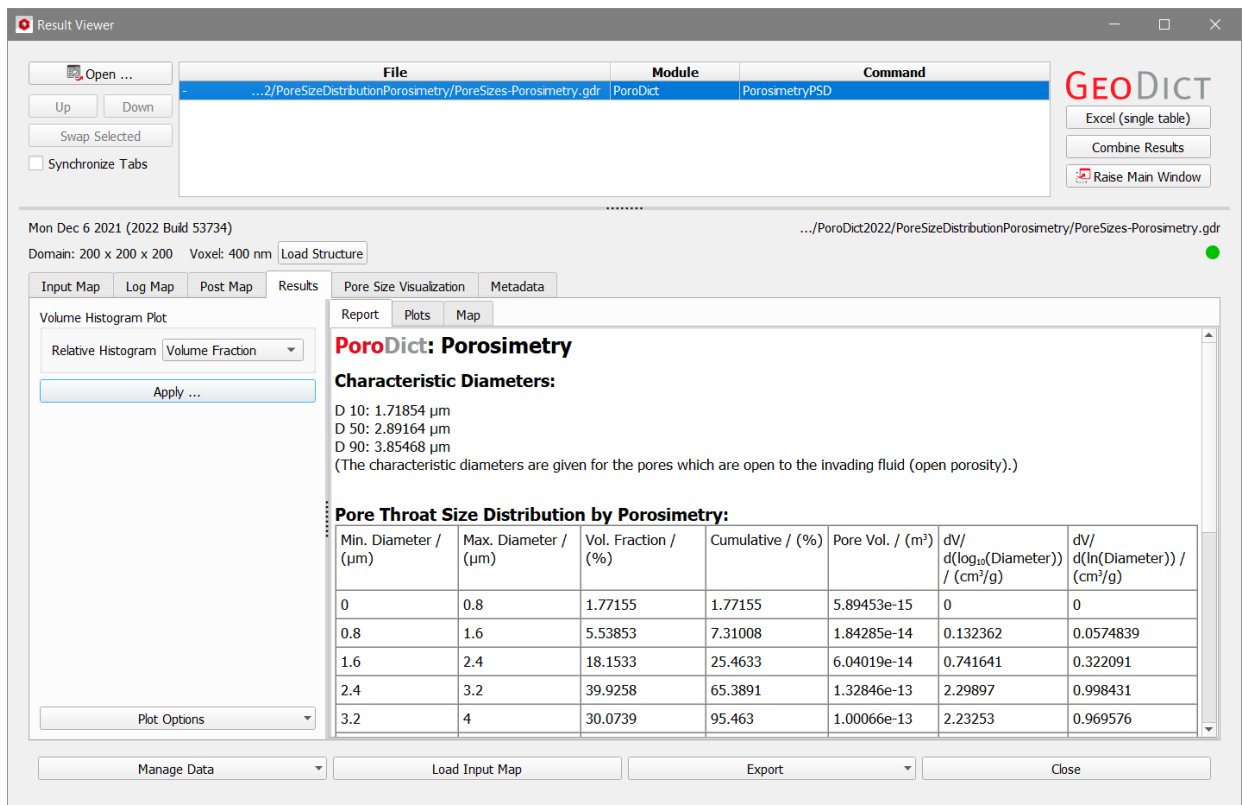

DATA VISUALIZATION

As explained above, the visualization of the pore space is done under the **Pore Size Visualization** tab. The user can select the saved *.gdt file corresponding to a particular pore diameter and click **Load Pore Geometry**.


SPEED-UP THROUGH PARALLELIZATION

The pore size distribution analyses **Granulometry** and **Porosimetry** can be parallelized with several processes to speed-up the simulation runtime.

By default, the computation is parallelized with the maximal number of available threads on the computer.


To set a manual number of threads, select **Settings** → **Settings** from the menu bar. In the **Settings** dialog move to the **Parallelization** tab and for **Thread Mode** choose **Manual Thread Number** from the pull-down menu. Then enter the desired number of processes for **Number of Threads**.

Click **OK** to close the dialog and run a pore size distribution analysis.

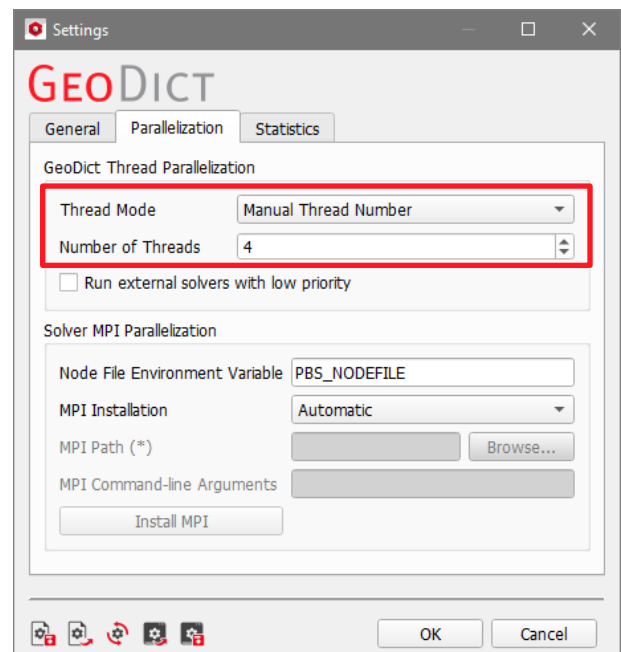


An example of a parallelization benchmark for PoroDict Porosimetry is shown here. The computation was run on a server with 2xIntel E5-2697A v4 processors with 16 cores each, running with a maximum of 3.60GHz.

The input structure is a filter structure with linearly increasing density of size 2048x2048x2032 voxels. A **Pore Size Distribution (Porosimetry)** analysis was run on this structure.

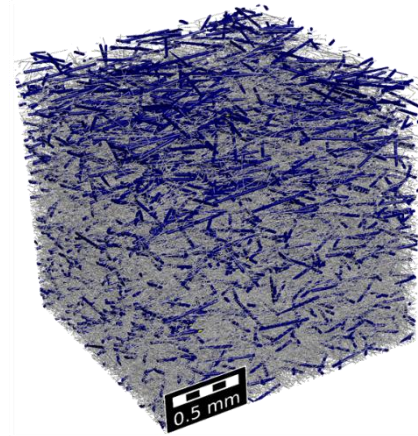


The following figure shows the runtime for a different number of processes for the whole simulation. The ideal speedup, i.e. getting half the runtime for twice the number of processes, is also shown as a gray dashed line.

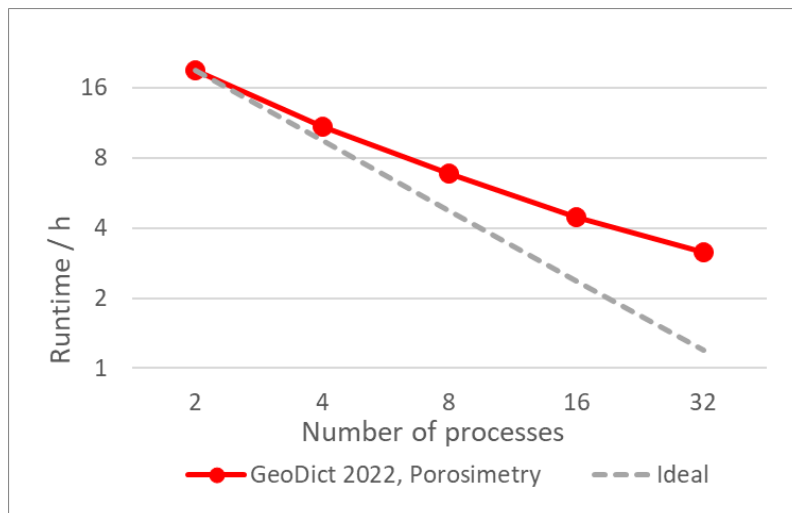

IDENTIFY PORES


After selecting **Identify Pores** from the pull-down menu, the parameters for the calculations can be modified through the **Edit...** button.

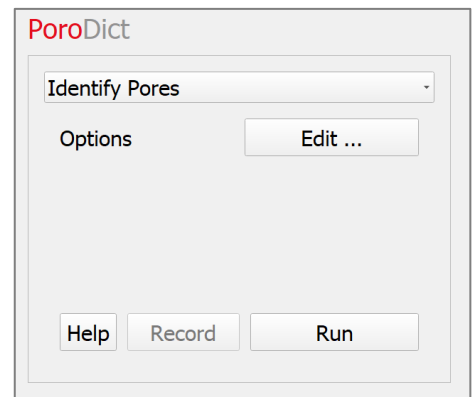

In the **Identify Pores** dialog box, enter the name for the file (**Result File Name**) where the results are saved in the chosen project folder.

PORE SEGMENTATION

The parameters under the **Pore Segmentation** tab are separated in four panels: **Initialization**, **Pore-Fragment Reconnection**, **Domain-Boundary Options**, and **Pore-Shape Analysis**.

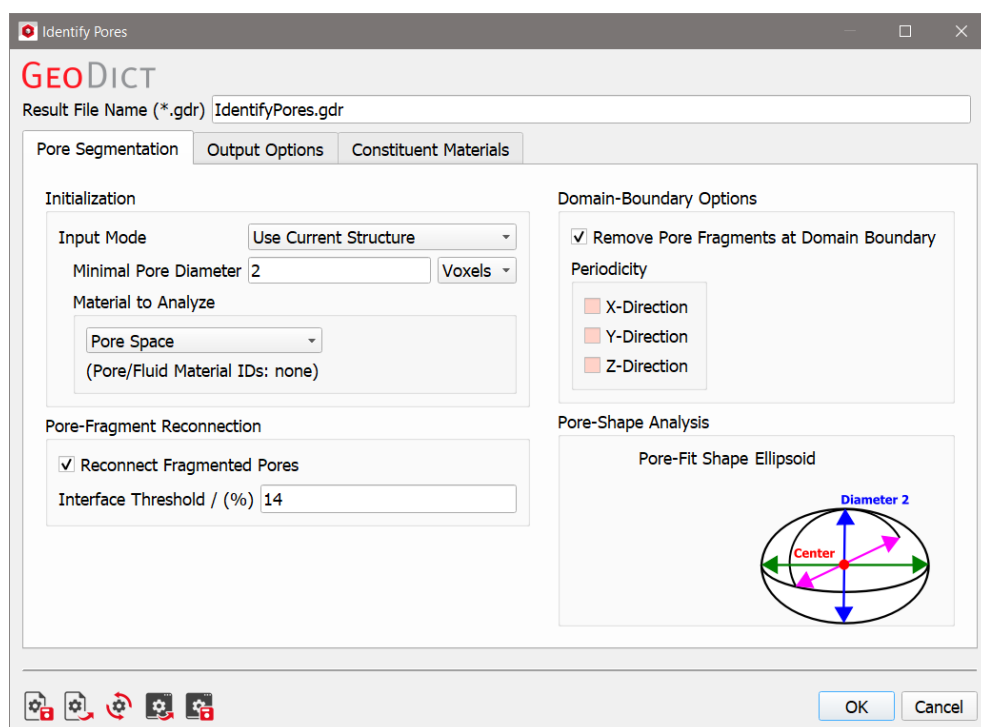

INITIALIZATION

The parameters in the **Initialization** panel define the basis for the analysis. The structure to be evaluated is chosen through the **Input Mode** and the material to be analyzed is selected through **Material to Analyze**.

For the **Input Mode**, three options are available: use the structure currently in memory (**Use Current Structure**), import already segmented data from *.g32 or *.leS-files (**Load Presegmented Data**), or **Use Loaded Index Image**

Initialization

Input Mode Use Current Structure

Minimal Pore Diameter 2 Voxels

Material to Analyze


Pore Space


(Pore/Fluid Material IDs: 00)

Initialization

Input Mode Load Presegmented Data

Pore-Index Image (*.g32; *.leS) Pores.g32 Browse...

Pore Material  Air (Fluid) ...

Solid Material  Calcite (Solid) ...

The initialization (the watershed algorithm) might be time consuming for large structures. Thus, the options **Load Presegmented Data** or **Use Loaded Index Image** are useful when performing parameter studies with **PoroDict** – Identify Pores, where the initialization is kept unchanged while other parameters are varied.


For **Load Presegmented Data**, the difference between the *.g32 and *.leS formats is that *.g32 is a binary format, which produces comparatively smaller files but is not human readable, and *.leS is an ASCII-format which is human-readable, but produces larger files. Furthermore, loading a *.g32 file into **GeoDict** is much faster than loading a *.leS file. Therefore, we recommend to use the *.g32 option.

Alternatively, **Use Loaded Index Image** can be used if the pre-segmented data is already loaded into **GeoDict**. In that case, it can directly be used and it is not necessary to load it again.


In the **Use Current Structure** mode, the **Minimal Pore Diameter** defines the minimal size an individual pore must have for the analysis. This parameter determines which pores to keep and which pores to neglect or merge with others. If smaller pores exist which are connected to larger pores, the pores are merged. Single pores with a diameter smaller than **Minimal Pore Diameter** are neglected.

In this figure, the effect of the choice for **Minimal Pore Diameter** in the initialization step (of the watershed algorithm) is illustrated using the visualization of .g32 files.

The original structure contains spherical pores with diameters 100 μm , 60 μm , and 20 μm , and some pores touch, sharing an interface.

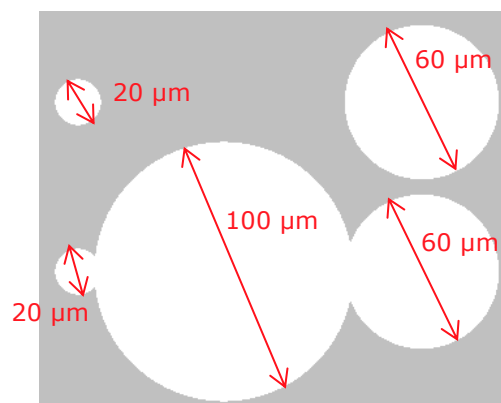


With **Minimal Pore Diameter** set to zero, all five pores are identified as single pores. When setting the **Minimal Pore Diameter** to 25 μm , the single 20 μm pore is neglected (shown in white), while the 20 μm pore connected to the larger pore is merged and so, only three pores are identified. Analogously, for a choice of 65 μm , only one single merged pore is detected while the smaller pores are neglected.

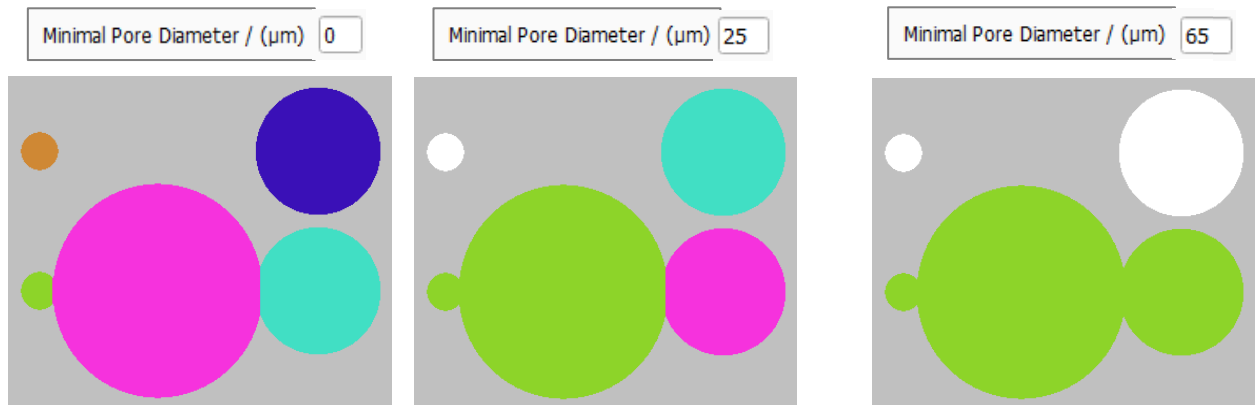

The unit of **Minimal Pore Diameter** can be selected as **Voxels** or **m**.

Under **Material to Analyze**, the user defines the part of the structure to be considered. Either the complete structure can be analyzed (**Pore Space**), an individual material in the pore space can be selected (**Chosen Pore/Fluid Material**) or a choice of material IDs in the pore space can be made (**Chosen Material IDs**). With **Chosen Material IDs**, one or multiple IDs can be chosen, **which are then combined and analyzed as one single material**.

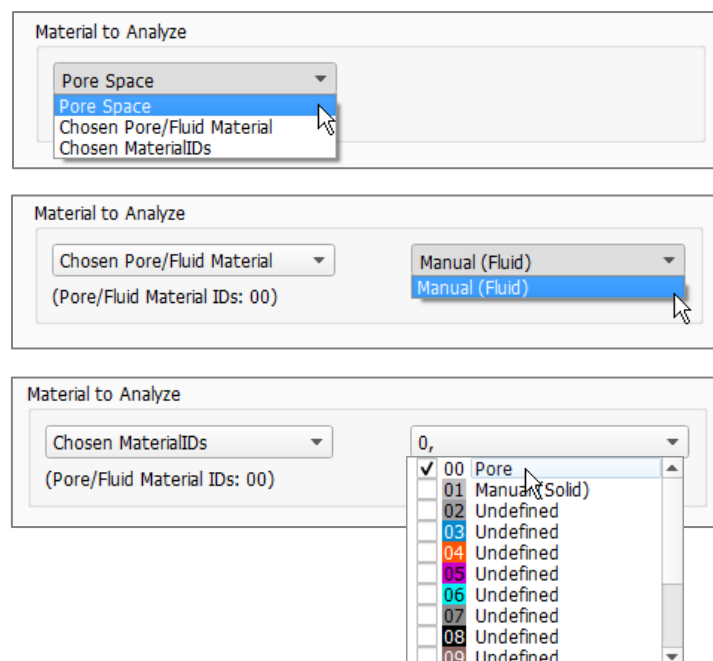

For example, when the pore space is occupied by brine and oil during the simulation of drainage or imbibition, choosing the material to analyze allows computing the amount of the pore space occupied by each of the two fluids.

PORE-FRAGMENT RECONNECTION

In some cases (e.g. for complex pore shapes), the watershed algorithm in step 1 tends to over-segment the pore space. This means, that sometimes pores are identified as multiple pores (**Fragmented Pores**) when, in fact, they may be a single pore with a complex shape.

By checking **Reconnect Fragmented Pores**, it is possible to overcome this over-segmentation by merging pores depending on the size of their shared interface. After checking **Reconnect Fragmented Pores**, the merging of connected pores can be controlled using the values entered for **Interface Threshold**.

The interface of two pores that touch is compared to the total surface of the smaller pore. If the ratio of interface to total surface is larger than the value chosen for **Interface Threshold** (in %), the two pores are merged and only one pore is reported as identified.

Pore-Fragment Reconnection

☒ Reconnect Fragmented Pores

Interface Threshold / (%)

For example, if the **Interface Threshold** is set to the default **14**, the shared interface of two pores must be larger than 14% of the total surface of the smaller pore for the two pores to be merged.

The next images show two examples in which a big pore and a small pore touch with different interface surface between them.




Depending on the surface of interface, the value of **Interface Threshold** at which the two pores stop being reconnected and are detected as two (instead of only one) is very different.

When the two pores share a small interface, a low value of **Interface Threshold** (8) is enough to separate the two pores.




When the two pores share a large interface, a larger value of **Interface Threshold** (17) is needed to separate the two pores.

The default value of **Interface Threshold** (14) would be appropriate to separate the two pores sharing a small interface, but not the pores sharing a large interface.

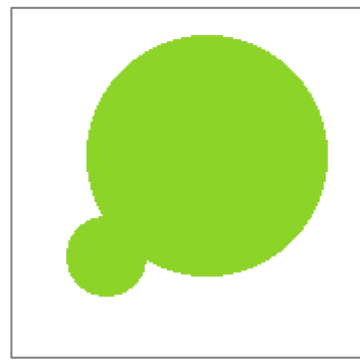

Interface Threshold / (%) 16

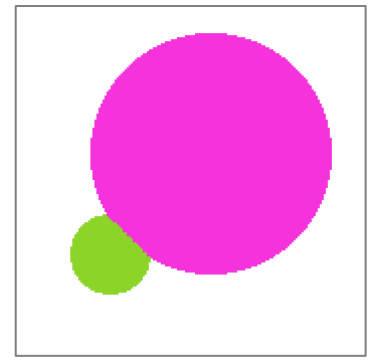


Interface Threshold / (%) 17

The value for the **Interface Threshold** must be chosen carefully depending on the size of pores in the structure. With a low threshold, more pores are merged (and less pores are identified).

In the figures below (using the visualization of .g32 files), observe the effect of different choices for the **Interface Threshold**. For this example, the **Minimal Pore Diameter** is always 2 μm and **Remove Pore Fragments at Domain Boundary** has been unchecked.


With a very low value of 3%, several large and complex pores are identified in the structure that may not correspond to single pores. With a value of 20%, the pore space may be over-segmented with many small pores being detected.

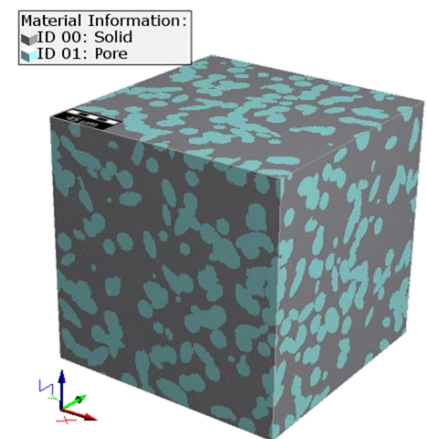

Pore-Fragment Reconnection

☒ Reconnect Fragmented Pores


Interface Threshold / (%) 3

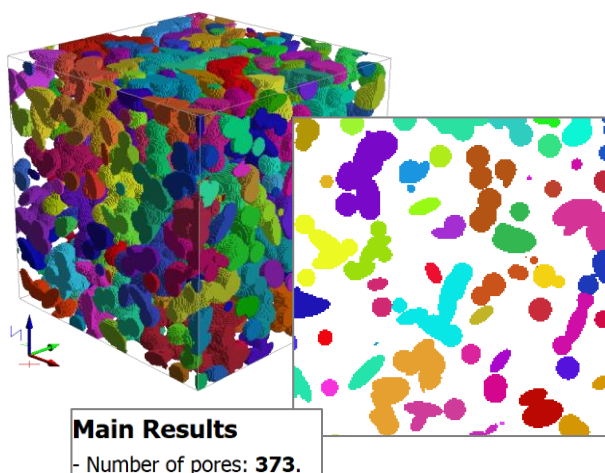

Pore-Fragment Reconnection

☒ Reconnect Fragmented Pores


Interface Threshold / (%) 20

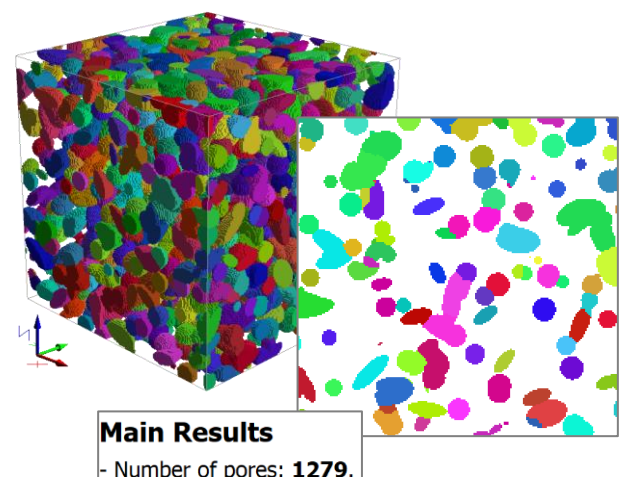

The choice of the **Interface Threshold** must be adapted to the expected pore shapes for the structure. Parameter studies for the **Interface Threshold** can be programmed with the help of a **GeoPy** macro. Detailed information about how to record, edit and run **GeoPy** macros can be found in the [Automation by scripting](#) handbook of this User Guide.


DOMAIN-BOUNDARY OPTIONS

In the **Domain-Boundary Options** panel, the handling of boundary pores is defined. When **Remove Pore Fragments at Domain Boundary** is checked, all pores touching the domain boundary after the initialization and the pore-fragment reconnection are removed. This might improve the results, since boundary pores which do not lay completely in the domain might lead to wrong estimates for the pore shapes.

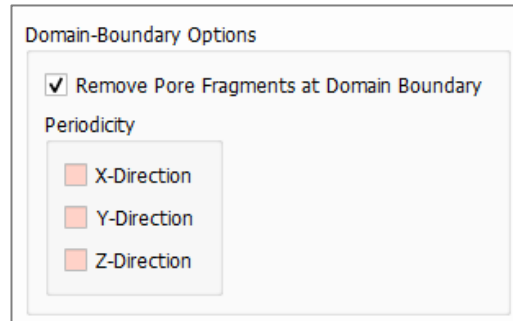

When **Remove Pore Fragments at Domain Boundary** is unchecked, the **Periodicity** options become available. By checking the X-, Y- or Z-Direction checkboxes, the pore space is treated as periodic in the chosen direction(s) before the pore segmentation. This option should only be chosen for real periodic structures, otherwise it might lead to strange results (with pores which are treated as connected but are distant from each other in reality).


Otherwise, when **Periodicity** is not chosen in a direction, the structure is assumed to end at the domain boundary.

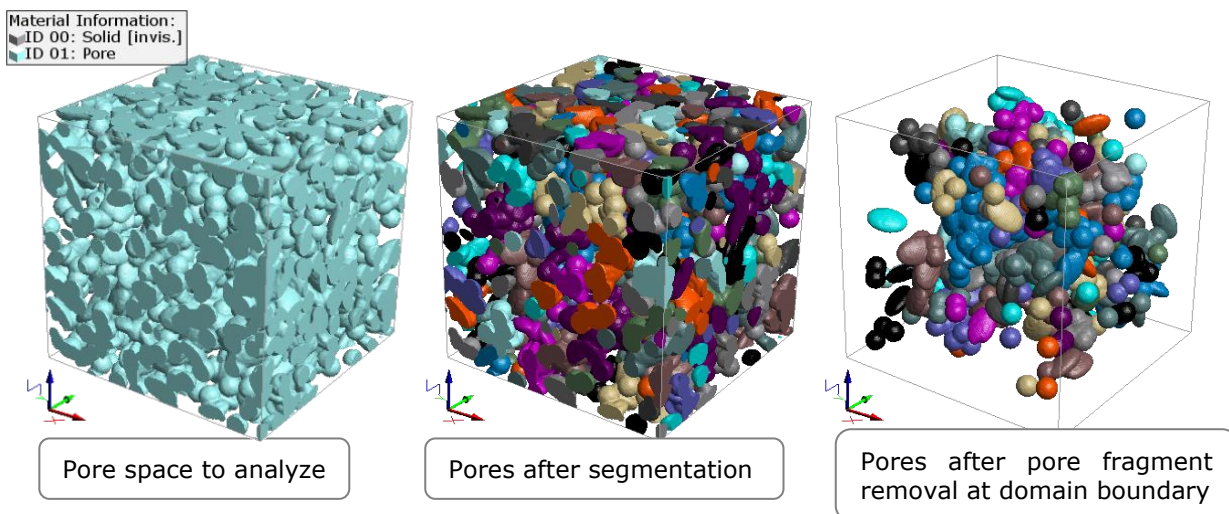

PORE-SHAPE ANALYSIS

After the pore identification step (defined by the parameters under the Initialization, Pore-Fragment Reconnection and Domain-Boundary Options), the shape of the pores is analyzed.

This analysis is done by fitting ellipsoids into the identified pores.

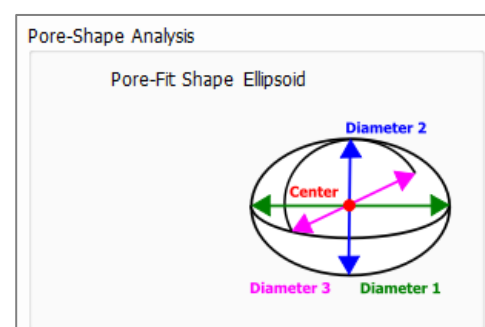


The figure below shows the results of **Pore-Shape Analysis** on a porous structure. These visualizations are loaded from the Results Viewer of the *.gdr result file (under the Pore Visualization tab).

On the right, the structure is shown after pores are identified, and the pore fragments are removed at the domain boundary.


The middle image shows the shapes of ellipsoids fitted to the pores.

The left image shows a comparison between the identified pores (red) and the ellipsoid shapes fitted to them (grey). The matching voxels are shown in blue. This visualization provides a validation of the fitting to the ellipsoid shapes. A fitting is very good when a high percentage of blue is observed, meaning that the fitted ellipsoids overlay the pores with great accuracy.

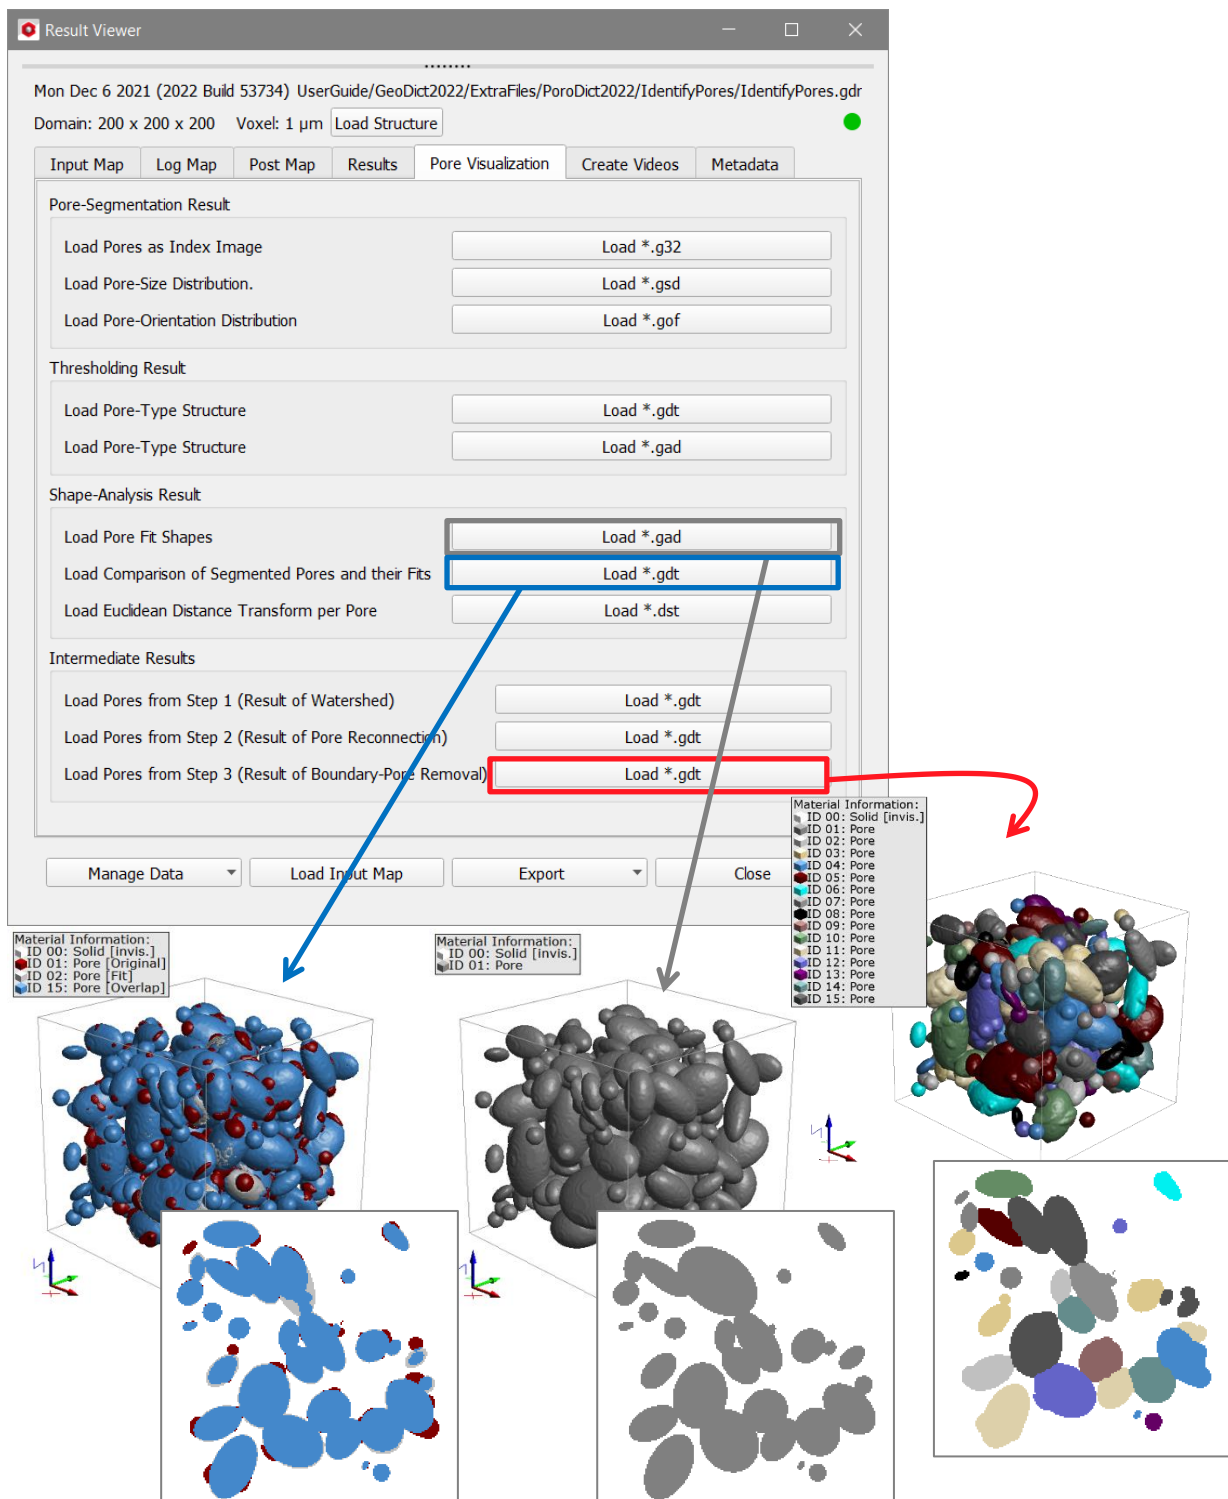

OUTPUT OPTIONS

Under the **Output Options** tab, additional results to be computed can be chosen. They are displayed later for visualization in the Result Viewer under the **Pore Visualization** tab. Some of these options need an additional computing effort and are unchecked by default.

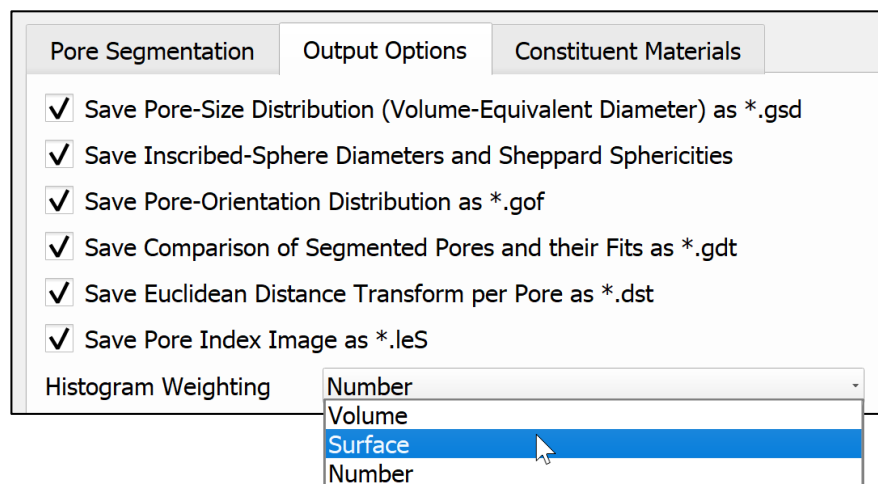

Check **Save Pore-Size Distribution (Volume-Equivalent Diameter) as *.gsd** to save the computed pore size distribution as a volume field. This information can be used e.g. for visualization of the volume field of the Volume-Equivalent Diameter (see page [30](#)) or for further analysis with Python.

When **Save Inscribed-Sphere Diameters and Sheppard Sphericities** is checked, the diameter of the inscribed sphere for every pore is calculated as volume field and saved. The results of this volume field are saved in the *.gsd file and can be loaded with it. The Sheppard sphericities and the inscribed sphere diameters can be found in the Result Viewer (Results – Plots – Sphericities tab and Diameters tab, see page [24](#)).

Check **Save Pore-Orientation Distribution as *.gof** to use the orientation information in simulations.

The checked-by-default **Save Comparison of Segmented Pores and their Fits as *.gdt** is useful to evaluate the quality of the fitted GAD-objects (Ellipsoids). A good accordance of the pore fit shapes and the identified pores is important as a basis for generating good digital twins.

After checking **Save Euclidean Distance Transform per Pore as *.dst**, the EDT for every pore is calculated individually and the result is saved in one single file (*.dst format).

The resulting pore index image is saved by default in the binary *.g32 format. With the last option, **Save Pore Index Image as *.leS**, it can be additionally saved as an ASCII file. This format takes more space and needs longer to be loaded into GeoDict, but it is human-readable and can easily be imported into other software.

Choosing **Histogram Weighting** as **Volume**, **Surface** or **Number** changes the values on the y-axis of the resulting histogram plots. Then, either the pore volume probability, the pore surface area probability, or the pore count probability is shown. The histogram weighting can be changed in the result viewer after the simulation has been run.

PORE IDENTIFICATION RESULTS

After performing the pore identification, the results are saved in a **GeoDict** result file (*.gdr) and the Result Viewer of the result file opens automatically.


By clicking **Load Structure**, the analyzed structure can be imported into **GeoDict**. Observe the dot at the right side of the **Load Structure** button: a green dot means that the current structure corresponds to the results shown in the results viewer. A red dot means that the structure does not correspond to the results.

The Result Viewer contains several tabs. **Input Map**, **Log Map**, and **Post Map** contain the parameters concerning the pore identification process. The **Log Map** contains information about the identification process, as e.g. the runtime and the used computer. The **Post Map** contains all information about the post-processing in the result viewer, as e.g. the chosen plots and their parameters. Only the **Input Map** is shown below in detail, the other two are structured analogously. The **Metadata** tab contains some meta information about the result file.

At the bottom of the Results Viewer, several options for the results are available. With **Clean Up/Pack**, either old results files can be deleted (Clean Up) or the results can be packed to a *.zip file. With the **Export** button, selecting **Excel (generic)** or **Matlab**, the content of the *.gdr result file can be loaded into Microsoft Excel® or MATLAB®. These options only work when the chosen software is installed on the computer. With **Load Input Map**, the parameters in the input map are loaded in the GUI and can be used to analyze different structures.

INPUT MAP

The **Input Map** contains a table with all chosen input parameters for **Identify Pores**. For example, it is shown that **Reconnect Fragmented Pores** was enabled, and that the **Interface Threshold** was 14%.

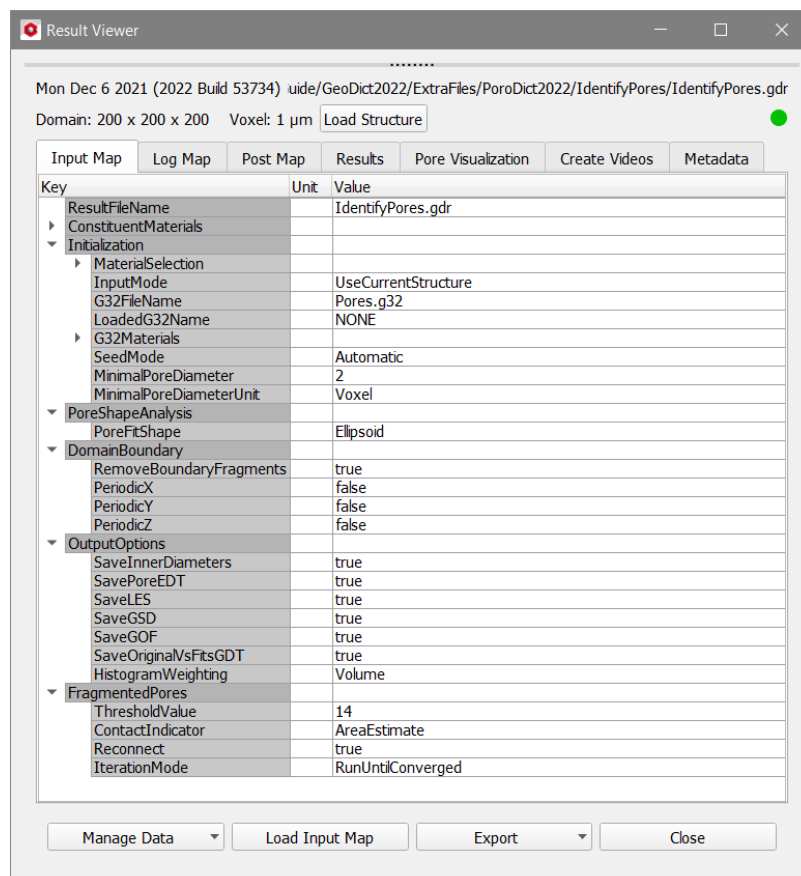

RESULTS

The **Results** tab is the central point for the analysis of the identified pores. It is grouped in three subtabs: **Report**, **Plots** and **Map**. The **Report** tab shows statistics about the identified pores and the **Plots** tab contains plot options for the analysis of results. The **Map** tab contains all resulting data from the **Identify Pores** run. This data is the basis for the tables in the **Report** tab and for the plots in the **Plots** tab.

The **Plots** tab offers ten plots to show the relationship between pore parameters: **Scatter Plot**, **Threshold by...** histogram, **Volume** histogram, **Diameters** histogram, **Perimeter** histogram, **Sphericities** histogram, **Aspect ratio** histogram, **Surfaces and Contacts** histogram, **Coordination Number** histogram, and the **Orientation** polar plot.

For the **Threshold by...** histogram, the threshold parameter must be selected under **Threshold by Scalar Value** on the left (See p. 26 for more explanations). The default is **Threshold by Volume**.

Settings for these plots can be selected in the panel at the left side of the **Plots** tab. After changes, click **Apply...** to use the new values. The changes are also applied to the table under the **Report** subtab.

Mon Dec 6 2021 (2022 Build 53734) .../UserGuide/GeoDict2022/ExtraFiles/PoroDict2022/IdentifyPores/IdentifyPores.gdr

Domain: 200 x 200 x 200 Voxel: 1 μm Load Structure

Input Map Log Map Post Map Results Pore Visualization Create Videos Metadata

Report Plots Map

PoreFind

Main Results

- Number of pores: **490**.
- Number of pore contacts: **536** (total pore contact area: 32208.5 μm^2).
- The index image "**Pores.g32**" and the human-readable index image "**Pores.leS**" contain the identified pores with their pore tags. These tags are integers ranging from 1 to 490.
- All mean values, all standard deviations, all D10 values, all D50 values, all D90 values, and all histogram values are calculated by **weighting** with the **pore volume**. The weighting can be changed in the post-processing widget.

Pore Volume Percentage Statistics

Step	Pore-Volume Percentage
Initial Pore Structure	34.9967 %
Watershed with Minimal Diameter	34.9932 %
Pore Reconnection	34.9932 %
Boundary Pore Removal	21.1639 %

Pore-Volume Statistics

	Minimum	Maximum	Mean Value	Standard Deviation
Volume	1552 μm^3	18546 μm^3	5120.94 μm^3	3504.78 μm^3

Pore-Sphericity Statistics


Sphericities	Minimum	Maximum	Mean Value	Standard Deviation
Krumbein ($b \cdot c / a^2$) ^{1/3}	0.472844	0.998308	0.762348	0.137042

Apply ...


Plot Options

Manage Data Load Input Map Export Close


In the example, observe in the **Scatter Plot** that the found spherical pores have an equivalent diameter of 15 μm , while the found ellipsoidal spheres have equivalent diameters between 15 and 32 μm .

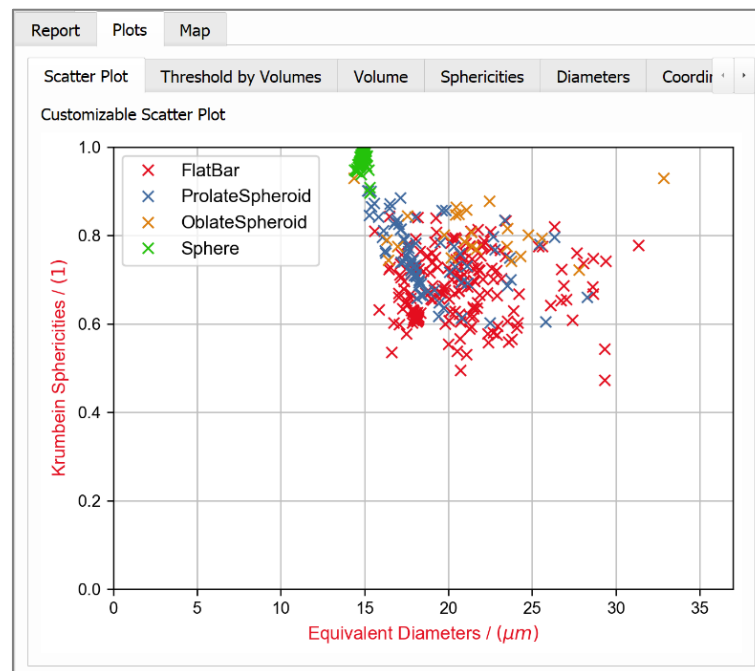

The plots Scatter Plot and Orientation distinguish between the four shapes Flat Bar, Prolate Spheroid, Oblate Spheroid and Sphere. These are the four possible shapes for the ellipsoids that are fitted into the pores.

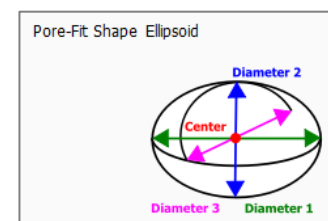

- An ellipsoid is formed as a **Flat Bar**, if all three diameters differ much from each other.
- A **Prolate Spheroid** has one bigger and two similar smaller diameters. Thus, it can be compared to a cigar.
- The two bigger diameters of an **Oblate Spheroid** are similar.
- For a **Sphere** all three diameters are similar.

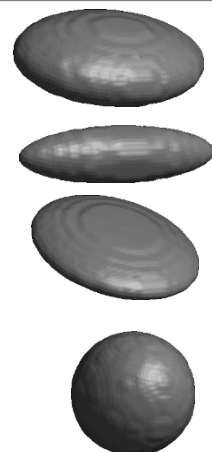


The settings for all plots are chosen in the collapse-expand panel to the left of the tabs.

Histogram Weighting and Histogram Plot Type

The values on the Y-axes of the histograms in all plots (except **Scatter Plot**, **Threshold by...**, **Volume** and **Orientation**) can show Count Probability, Area Probability or Volume Probability, as a Relative or Cumulative plot. The Area (or Surface) Probability is defined by computing the surface area of each segmented pore (using the same algorithm as in **MatDict's** Estimate Surface Area command) and then

weighting the pores by that value. The computed surface area does also include the surface between different pores, not only the area between pore and solid material.


This can be set by adjusting the **Histogram Weighting** and **Histogram Plot Type**.

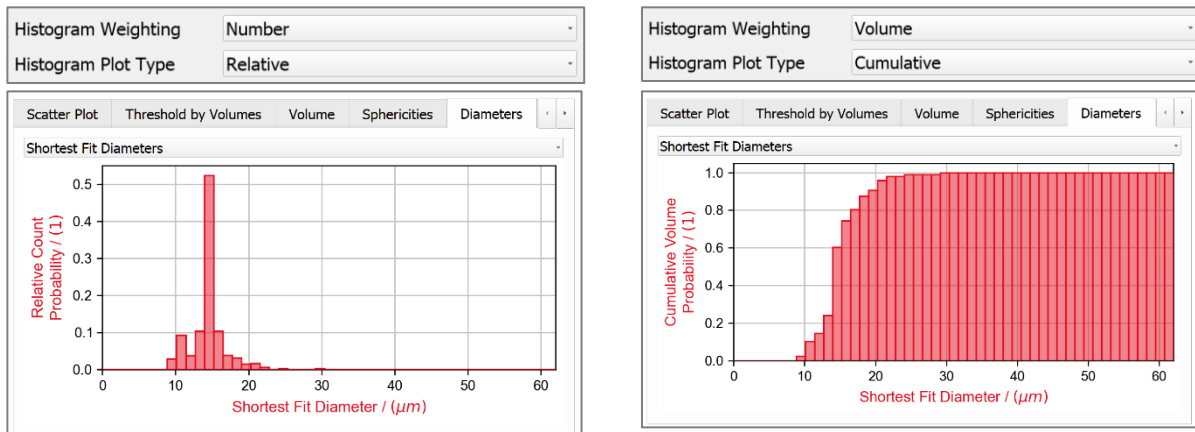

The plot under the **Volume** tab only shows Count Probability or Volume Probability, which can also be selected with the **Histogram Weighting**. If **Surface** is chosen as Histogram Weighting, Volume Probabilities will be used in the **Volume** plot.


Scatter Plot

Under **Scatter Plot**, the variables for the scatter plot can be chosen.

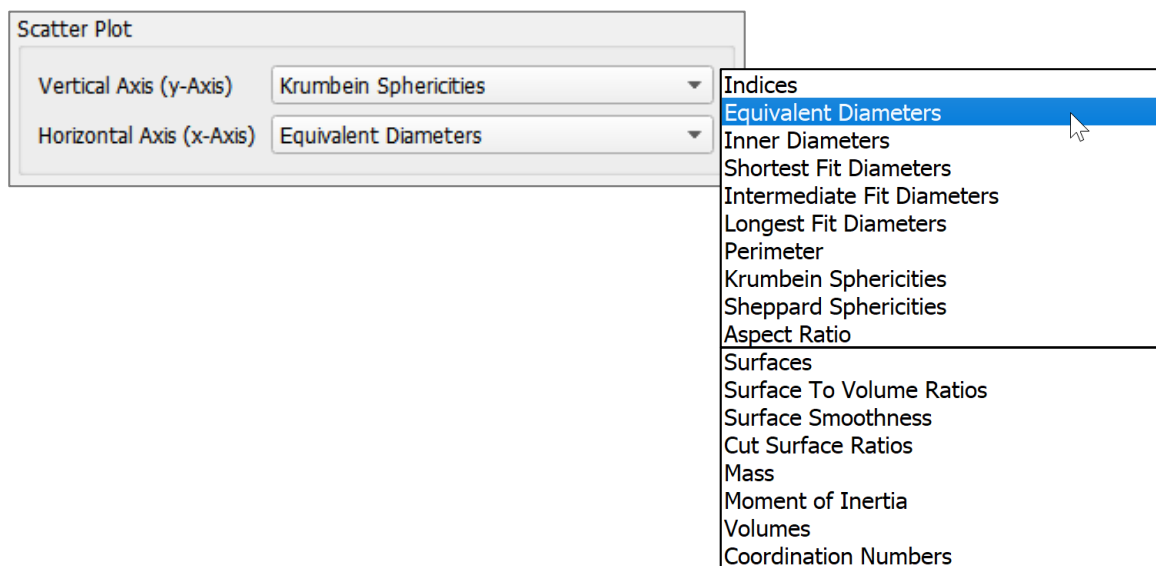

Threshold by Scalar Value

In **Threshold by Scalar Value**, several options for thresholding the structure depending on the results are available. The following **Thresholding Methods** are available:

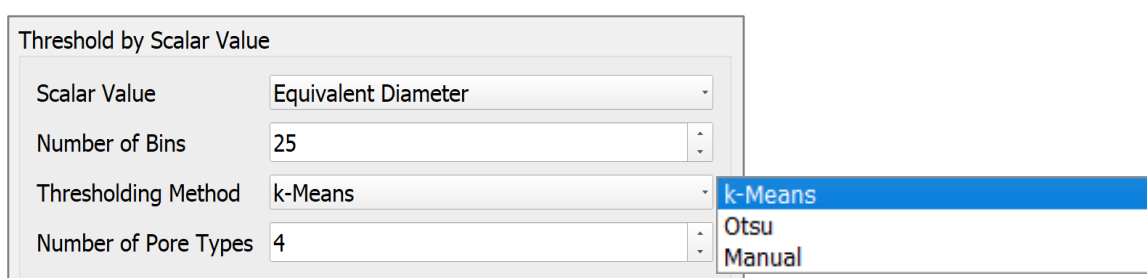

- **k-Means**: uses the k-Means algorithm to find thresholds for the chosen Number of **Pore Types**.
- **Otsu**: uses the Otsu algorithm to find thresholds for the chosen **Number of Pore Types**.
- **Manual**: define your own thresholds by writing a comma-separated list of thresholds into **Threshold(s)**. They will then be applied to the computed pore index image.

In every case, a plot is created under the **Plots - Threshold by ...** subtab, and a structure containing the materials of the thresholded pores will be created, that can be accessed through the **Pore Visualization** tab → **Load Pore-Type Structure** → click **Load *.gdt** button.

The following measures (scalar values) are available for thresholding:

- **Equivalent Diameter**: the diameter of the volume-equivalent sphere.
- **Inner Diameter**: the diameter of the largest sphere that can be inscribed into the pore.
- **Shortest Fit Diameter**: the shortest diameter of the shape (ellipsoid, box, short fiber) fitted onto the pore.
- **Intermediate Fit Diameter**: the intermediate diameter of the shape (ellipsoid, box, short fiber) fitted onto the pore.
- **Longest Fit Diameter**: the longest diameter of the shape (ellipsoid, box, short fiber) fitted onto the pore.
- **Perimeter**: three diameters are defined by the ellipsoid fitted into the pore. The perimeter is the shortest perimeter around this ellipsoid, computed as the perimeter of the ellipse formed from the two smallest of those three diameters.
- **Krumbein Sphericity**: measure for the sphericity $P_K = \sqrt[3]{\frac{bc}{a^2}}$ based on the three principal axes (a,b,c) of the ellipsoid fitted into the pore.
- **Sheppard Sphericity**: the diameter of the inscribed sphere divided by the diameter of the volume-equivalent sphere.
- **Aspect Ratio**: three diameters are defined by the ellipsoid fitted into the pore. The aspect ratio is the shortest diameter divided by the largest of those diameters.
- **Surface**: surface of the pores estimated by an algorithm based on **PoroDict's Estimate Surface Area** command (see J. Ohser and F. Mücklich, Statistical Analysis of Microstructures in Materials Science, Wiley and Sons, 2000, p. 115).
- **Surface-to-Volume Ratio**: estimated surface of the pore divided by the volume of the pore.
- **Surface Smoothness**: the surface of a fitted ellipsoid divided by the estimated surface. Usually the estimated surface is larger than the surface of the fitted

ellipsoid. Hence, the surface smoothness is usually below 1. Only if the shape of the pore is very ellipsoidal, then the surface estimation might be a little smaller than the surface of the fitted ellipsoid.

- **Cut-Surface Ratio**: the interface of the pore with the domain boundary over the remaining surface of the pore. The **Cut-Surface Ratio** measures how much of the pore surface is part of the domain boundary. It is a measure for the quality of boundary pores. For example, a **Cut-Surface Ratio** of 1 means that the interface of the pore with the domain boundary is as large as the remaining surface of the pore.

NOTE that the domain boundaries, that were set to be periodic, do not contribute to the interface of the pore with the domain boundary. Particularly, if all domain boundaries are set to be periodic, the cut-surface ratio will always be zero. Also, if **Remove Pore Fragments at Domain Boundary** was activated (page [20](#)), then the cut surface ratio is zero, too, because there will be no pores left that have an interface with the domain boundaries.

- **Mass** is not available for pores. Selecting this option leads to an error message.
- **Moment of Inertia** is not available for pores. Selecting this option leads to an error message.
- **Volume**: the volume of the pore, simply determined by the number of voxels the pore contains.
- **Coordination Number**: the number of contacts of a pore to other pores.


NOTE that the choice of **Inner Diameter** and **Sheppard Sphericity** are only available if the option **Save Inscribed-Sphere Diameter and Sheppard Sphericities** was checked in the **Output Options** of the pore-identification options (page [22](#)).

GSD Field Choices

The **GeoDict** size distributions (GSD) files allow to visualize the various scalar pore properties that are a result of the pore identification.

See the options for the configuration of a **GeoDict** size distribution (GSD) file in the figure below. For every chosen pore property, a volume field is created containing the 3D distribution of this pore property. These volume fields are saved together in a GSD file (*.gsd), which can be accessed through the **Pore Visualization** tab → **Load Pore-Size Distribution** → click **Load *.gsd** button.

For example, by choosing **Equivalent Diameter** and **Inner Diameter**, the *.gsd file will contain two volume fields: one with the size distribution of the diameters of volume-equivalent spheres, and one with the inner diameter.

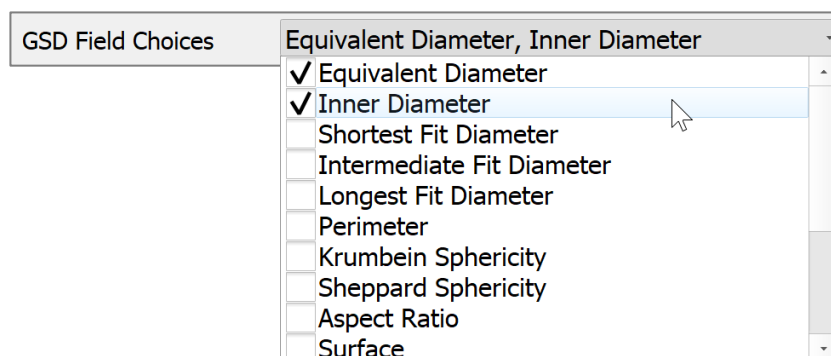

The same measures for assembling a customized size distribution are available as for the thresholding (see page [26](#)).

Histogram Bin Sizes

The bin sizes used in the plotted histograms can be customized.

Diameters	Number of Bins	/ (1)	50
Perimeter	Bin Size in Voxels	/ (Voxels)	1
Sphericities, Aspect Ratio	Number of Bins	/ (1)	50
Surfaces, Contacts	Bin Size in Units	/ (μm^2)	54
Surface Density	Bin Size in Units	/ ($1/\mu\text{m}$)	0.0047
Surface Smoothness	Bin Size in Units	/ (1)	0.011

In general, it is possible to choose between:

- **Number of Bins:** choose how many bins the histogram should have.
- **Bin Size in Units:** choose the bin size for the histogram using the value in the appropriate unit (m, μm , nm, etc.).
- **Bin Size in Voxels:** choose the bin size for the histogram using the value measure in voxel lengths.


As the different histogram plots show different results, only those choices are available which make sense for the corresponding plot.

- The selection made under **Diameters** changes the bin size for all plots under the **Diameters** tab.
- The selection made under **Perimeter** changes the bin size for the plot under the **Perimeter** tab.
- The selection made under **Sphericities, Aspect Ratio** changes the bin size for both plots under the **Sphericities** tab and the plot under the **Aspect Ratio** tab.
- The selection made under **Surfaces, Contacts** changes the bin size for the **Surfaces** and **Contacts** plots under the **Surfaces And Contacts** tab.
- The selection made under **Surface Density** changes the bin size for the **Surface-to-Volumes Ratios** plot under the **Surfaces And Contacts** tab.
- The selection made under **Surface Smoothness** changes the bin size for the **Surface Smoothnesses** plot under the **Surfaces And Contacts** tab.

PORE VISUALIZATION

The **Pore Visualization** tab is used to import structures and computed volume fields which illustrate the pore identification process and its results.

Under the **Pore Visualization** tab, several options are available for the visualization of the different steps of **Identify Pores** and for the evaluation of the quality of the results. Some options might be unavailable, depending on the previously chosen parameters in the **Identify Pores** dialog (Output Options tab. see page [22](#)).

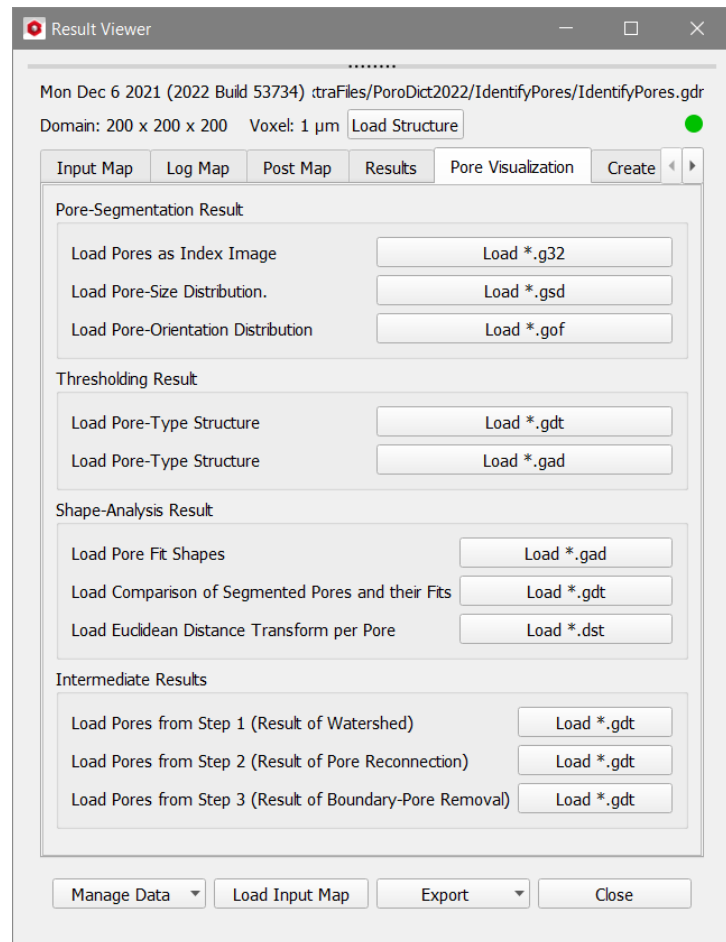

Pore-Segmentation Result

In the first panel, several options for the analysis of the identified pore shapes are available. With **Load Pores as Index Image**, all identified pores are assigned to a unique 32-bit color and can be investigated in the Visualization area. The 2D-view of *.g32 files is particularly suited for visual analysis of the correct segmentation.

The **Load Pore-Size Distribution** and the **Load Pore-Orientation Distribution** are greyed out when these two options have not been previously checked under the **Output Options** tab of the **Identify Pores** dialog (see page [22](#)).

Thresholding Result

As mentioned above in [Thresholding](#), clicking the **Load Pore-Type Structure' Load *.gdt** button loads the structure that contains the thresholded pore materials. The options for the thresholding can be found in the **Results** tab.

Shape-Analysis Result

With **Load Pore Fit Shapes**, the best-fit shapes for the individual pores are imported into **GeoDict** as *.gad file and can be visualized.

The option to **Load Comparison of Segmented Pores and their Fits** is closely related to **Load Pore Fit Shapes**. The identified pores and their best-fit shapes are

both imported into **GeoDict** and shown as different materials (**Original** and **Fit**). This is a good indicator for evaluating the performance of pore identification with the chosen options, too (compare the figure on page 21 for reference).

With **Load Euclidean Distance Transform per Pore**, the results of the Euclidean Distance Transform for each pore can be imported if **Save Euclidean Distance Transform per Pore as *.dst** was previously checked under the **Output Options** tab of the **Identify Pores** dialog (see page 22).

Intermediate Results

In the **Intermediate Results** panel, results from the identification steps can be loaded.

With **Load Pores from Step 1 (Result of Watershed)**, the segmented pores after the watershed transform are shown without any post-processing. Depending on the structure and the chosen **Minimal Pore Diameter**, this step might already be good enough to identify the pores. Otherwise, this option is useful to check the initialization options – mainly if the **Minimal Pore Diameter** was chosen correctly for the analyzed pore space.

By clicking **Load Pores from Step 2 (Result of Pore Reconnection)**, the pore space after the Pore-Fragment Reconnection is loaded in **GeoDict**. This way it can be assessed whether the chosen value for **Interface Threshold** suits the analyzed pore space.

Load Pores from Step 3 (Result of Boundary-Pore Removal) imports the identified pores resulting from the removal of pore fragments defined in the **Domain-Boundary Options**.


For the visualization of the identified pores, remember that the visibility of all material IDs must be set to visible in **Settings** → **Color & Visibility Settings** → **visible**. The identified pores are assigned 15 random colors, which are unrelated to their size.

The visibility of the non-pore space (ID 00) should be unchecked and, thus, it will not be rendered.


CREATE VIDEOS

With **Create Videos**, it is possible to automatically generate a video showing the largest identified pores compared to their fit shapes.

Click **Edit Parameters...** to choose the number of pores that should appear in the video. Additionally, the video duration and the fontsize for the plot labels can be edited.

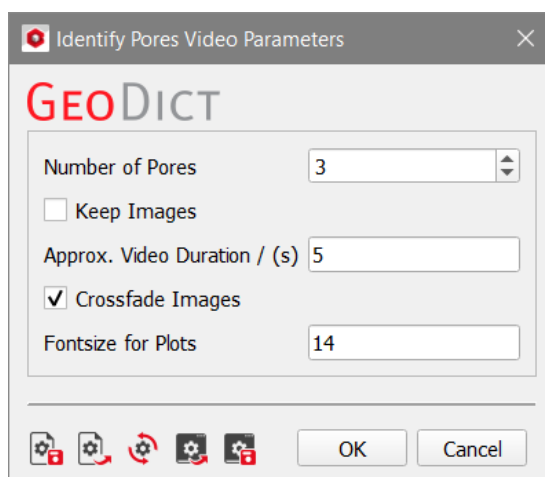


Clicking the **Create Video ...** button starts the creation of the video. When the video is finished, the video file is saved in the results folder belonging to the loaded *.gdr file. The result folder can be opened by right-clicking on the file name or file path in the Result Viewer Header section box and choosing **Open Result Folder**.

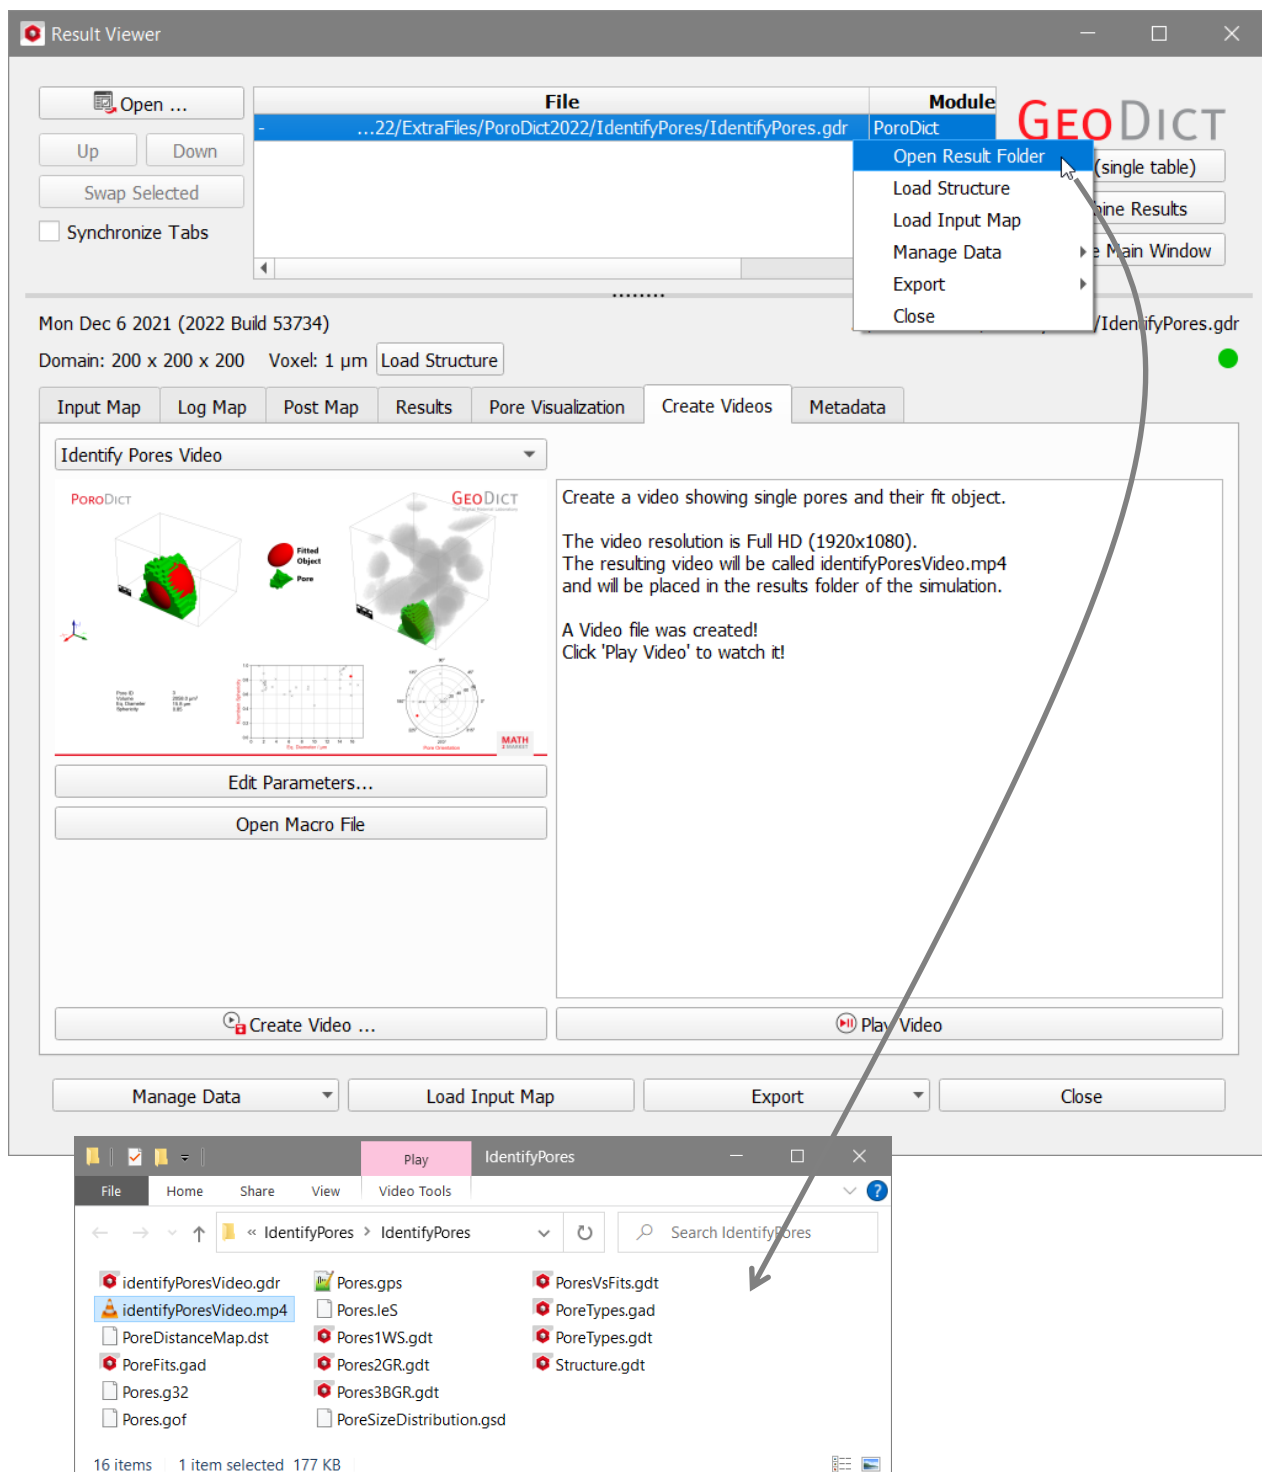

OPEN AND CLOSED POROSITY

When selecting **Open and Closed Porosity** from the pull-down menu, the settings for the calculations can be modified through the **Options' Edit...** button.

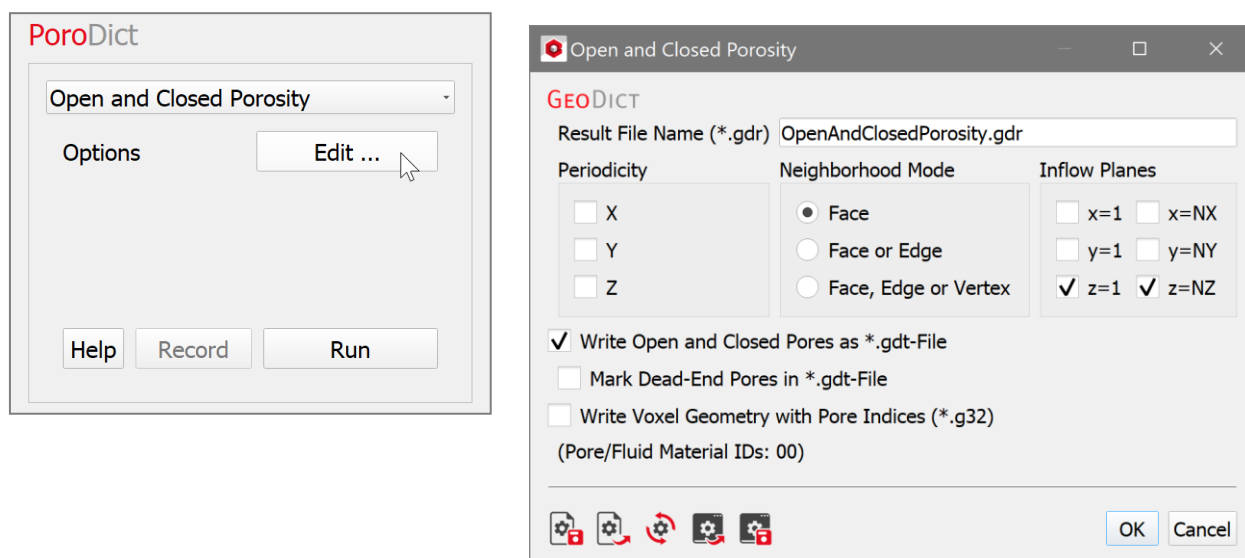


In the **Open and Closed Porosity** dialog box, the name for the file (**Result File Name**) where the results are saved in the chosen project folder can be entered. Then select whether to apply **Periodicity** to the structure in one or more directions.

The **Neighborhood Mode** determines how many voxels from the pore space material in the structure are perceived as belonging to a connected group. Checking **Face** is more restrictive than choosing **Face or Edge**. The most permissive **Neighborhood Mode** condition is **Face, Edge or Vertex**.

The selection of **Inflow Planes** determines to which surface the pores should be open to be considered part of the open pore network.

For example, here with the default $z=1$ and $z=NX$ checked, pores that do not open to the Z-inflow planes (at the top and at the bottom of the volume) are deemed to be closed.

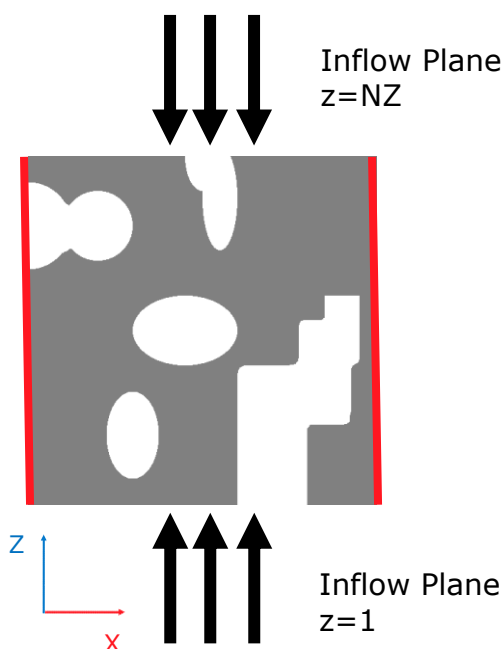

When **Write Open and Closed Pores as *.gdt-File** and/or **Write Voxel Geometry with Pore Indices (*.g32)** are checked, .gdt and/or .g32 files are saved in the results folder (inside the project folder) with the default name **pores.gdt** and **pores.g32**. The files in *.g32 format are considerably larger than those in *.gdt format and contain all identified pores with the index per pore.

By checking **Mark Dead-End Pores in *.gdt File** the open pores can be subclassified in


- dead-end pores, which have only contact with one of the specified inflow planes
- through pores, which connect multiple specified inflow planes.

This classification only makes sense if multiple inflow planes are chosen.

RESULTS


The Result Viewer opens at the end of the calculations.

Under the **Results - Report** subtab, a table shows the calculated overall porosity, open porosity, and closed porosity, as well as the total number of pores, the number of open pores, and the number of closed pores.

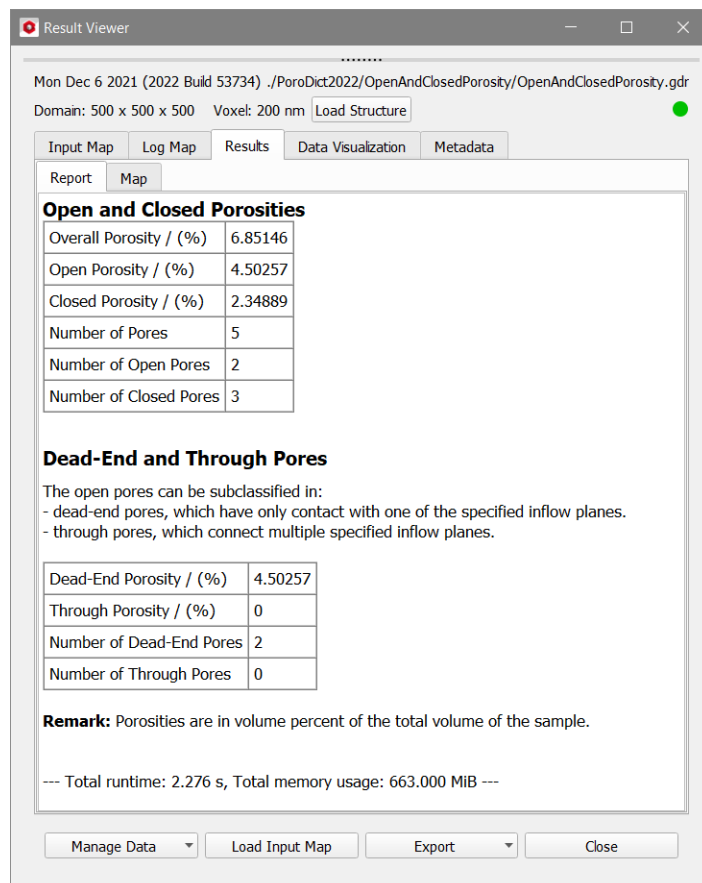


DATA VISUALIZATION

Under the **Data Visualization** tab, click **Load *.gdt** to observe the open and closed pores network.

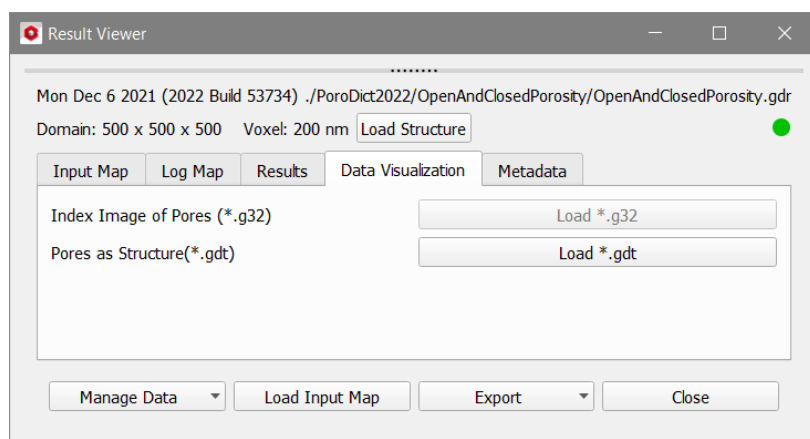


The material ID 00 is assigned to the Open Pores and is invisible per default.

The Closed Pores are assigned the next available ID after the solid material IDs (all Solid). Here it is material ID 02, shown in beige. One of the closed pores is closed to the Z-inflow planes but would be assigned to open pores if $x=1$ was chosen for Inflow Plane.

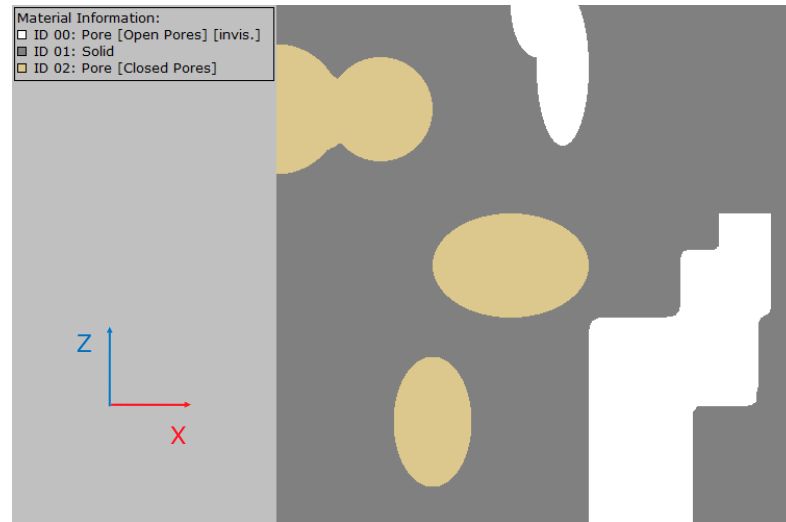


BUBBLE POINT

When selecting **Bubble Point** from the pull-down menu, the **Wetting Parameters**, **Flow Direction** and **Boundary Conditions** can be modified through the **Edit...** button.

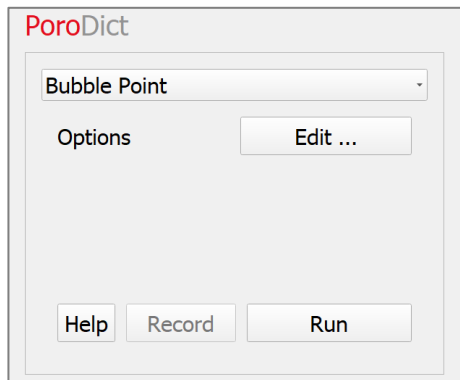


In the **Bubble Point** dialog, choose the **Result File Name**.

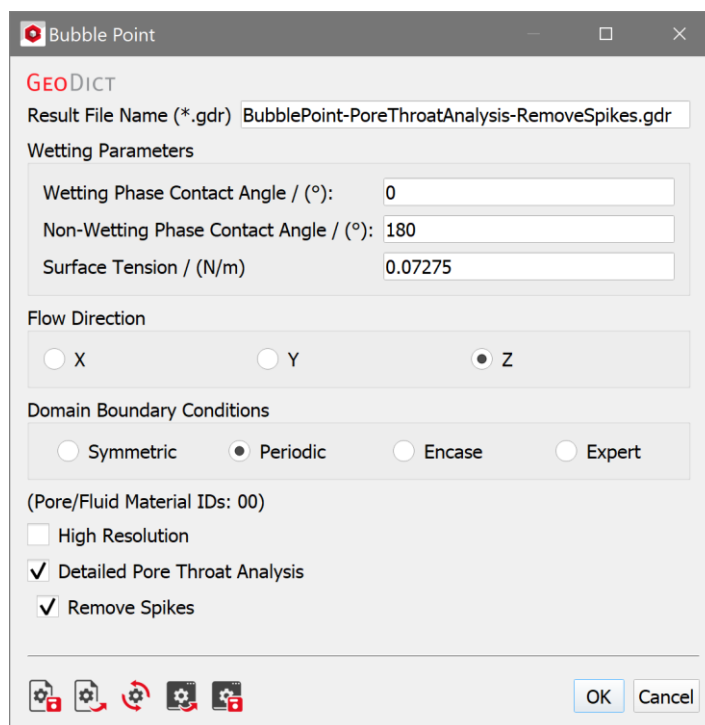

Then, choose the **Wetting Phase Contact Angle** and the **Non-Wetting Phase Contact Angle**.

The sum of the contact angles is 180°, (here 25° and 155°) and they are adjusted automatically when changing one of the two values.

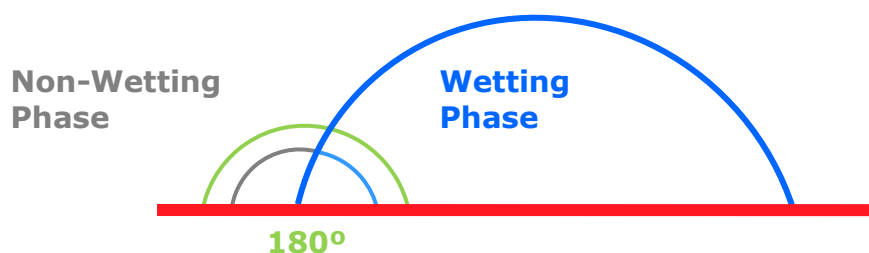


Enter the **Surface Tension** of the fluid or use the default value corresponding to the surface tension of water.

The direction of the flow (**X**, **Y**, or **Z**) can also be defined.

The **Domain Boundary Conditions** can be chosen to be **Symmetric**, **Periodic**, **Encase**, or any combinations of those boundary conditions in all three directions with the choice of **Expert**. A detailed explanation of the different conditions can be found on page [6](#).

To run the calculations in **High Resolution** might be useful when the pore space is assumed to be especially narrow. The standard algorithm computes pore sizes and distances directly on the voxel grid, i.e. when determining the pore size, only the distances from the center of a pore voxel to the center of a solid voxel are taken into account. High Resolution also takes the voxel surfaces and edges into account, so the computed distances correspond to the distance to the next solid surface or edge.

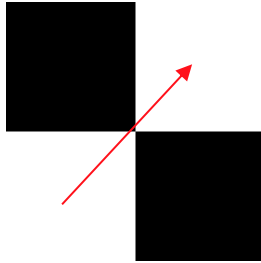

As an extreme example, the standard algorithm detects a percolation path across voxel edges, as shown on the left. Using the **High Resolution** mode, no percolation path is found in such a situation, which is more accurate.

The disadvantage of the **High Resolution** mode is that the calculation runtime and memory usage may increase by a factor of eight.

If **Detailed Pore Throat Analysis** is switched on, the location and the shape of the smallest pore throat is found and geometrically analyzed. Multiple candidate throat planes along the percolation path will be tested by constructing planar ray-traced planes with varying tilt angles. The plane with the smallest area will be used for further analysis. This includes calculation of the hydraulic diameter, a detailed plot of the pore throat and enables loading the voxelized pore throat into **GeoDict**.

The circumference of this pore throat may exhibit spike-like extrusions, which have a strong influence on the geometrical analysis run. With the **Remove Spikes** option, those are removed before running the geometrical analysis. We advise to always have a look at the pore throat plot, to identify spikes in the pore circumference.

RESULTS


The Result Viewer opens at the end of the computations and the results are automatically saved in the project folder.

The bubble point pressure p_c is computed from the determined largest through pore radius r using the Young-Laplace equation:


$$r = \frac{2\sigma}{p_c} \cos \alpha$$

where α is the wetting phase contact angle, and σ is the surface tension entered in the **Bubble Point** dialog.

Material Information:
 ID 00: Air [Invis.]
 ID 01: Polyethylene Terephthalate (PET) [Weft]
 ID 02: Polyethylene Terephthalate (PET) [Warp]

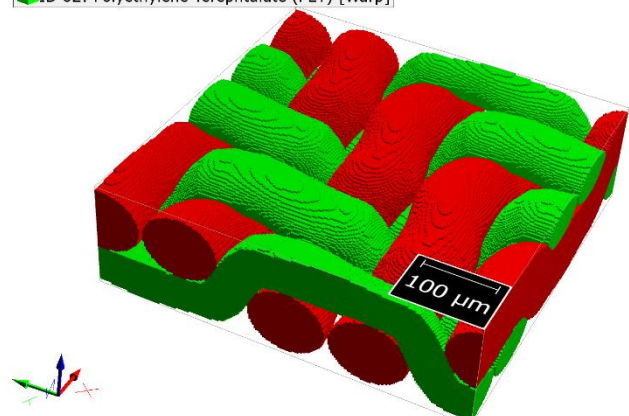


When the **Detailed Pore Throat Analysis** was switched off, the report only states the fitting particle diameter and the corresponding bubble point pressure as computed with the Young-Laplace equation. The fitting particle diameter is the largest through pore diameter as computed with the **Percolation Path** command (see the [MatDict](#) handbook of this User Guide for reference).

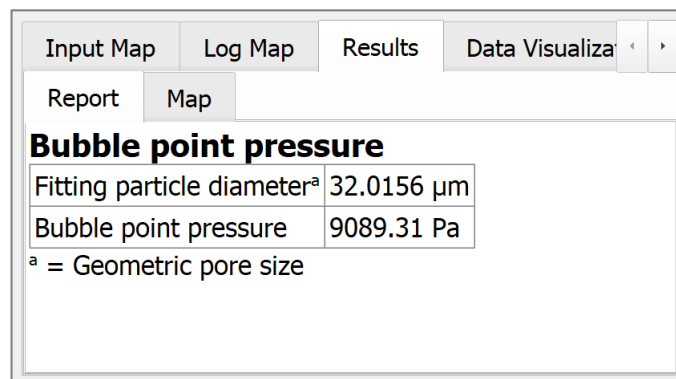


If a **Detailed Pore Throat Analysis** is run, the standard results are also reported, but additionally, the pore throat is found, and its shape is analyzed.

The user can find the pore throat's area, circumference length, position, and normal direction in the result Viewer of the result file. Based on the area and circumference, the hydraulic diameter is calculated and used to predict a more precise bubble point pressure.

The results may vary depending if **Remove Spikes** was chosen or not, the screenshot below shows the results without this option on the left, and with this option on the right:

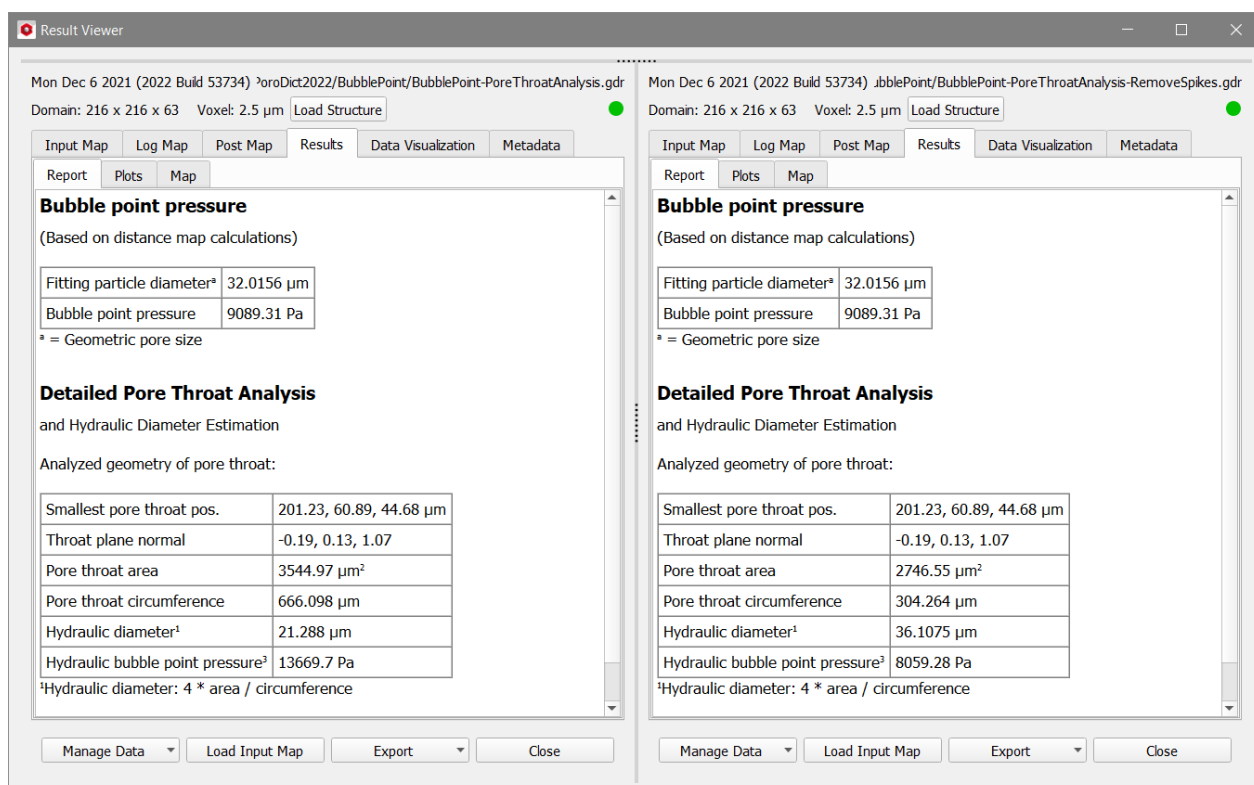

The pore throat cross section and the computed diameters are shown as 2D plot under the **Plots** tab:

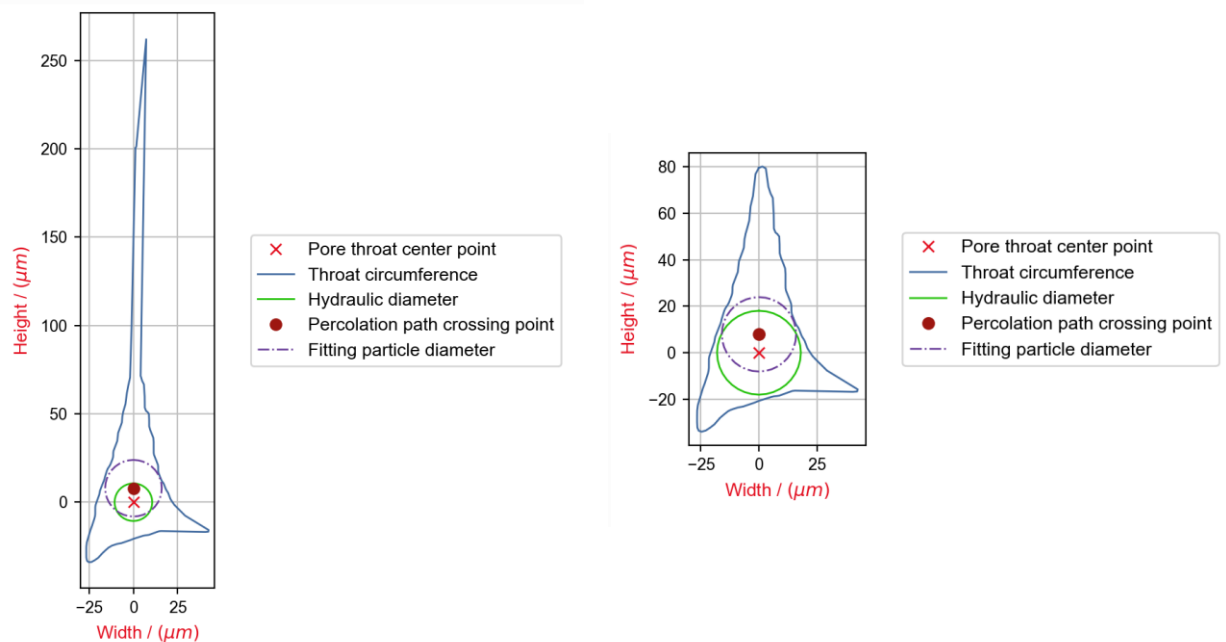


If the plot looks like the one on the left side, please enable the **Remove Spikes** option, as described [above](#). When **Remove Spikes** is used, the spikes seen in the circumference are removed before calculating the fitting diameters (see plot on the right side).

Up to six types of plot data are shown.


- The **Pore throat center point** is the center of the pore throat.
- The **Throat circumference** is the outline of the pore throat.
- The **Pore throat fitting diameter** describes the maximal circle around the pore throat center point. This parameter considers only the two dimensions of the cross section. Thus, it is only used for visualization and not for the bubble point computation. The corresponding plot is disabled by default. It can be enabled by right-clicking in the plot and checking the corresponding box.
- The **Hydraulic diameter** is a result of throat area and calculated bubble point pressure. For detailed information refer to the [Wikipedia page](#). It can be quite different from the **Fitting particle diameter**, especially for pore throats with sharp angles.
- The **Percolation path crossing point** is the point, where the percolation path crosses the pore throat. As the percolation path considers all three dimensions, the percolation path crossing point and the pore throat center point can be different.
- The **Fitting particle diameter** is the diameter of the circular particle fitted into the pore throat when computing the percolation path. The percolation path crossing point is the center point of the circle described by this parameter.

DATA VISUALIZATION


When the **Detailed Pore Throat Analysis** was switched off, no additional visualization options are available under the **Data Visualization** tab. If the option was switched on, two options are available:

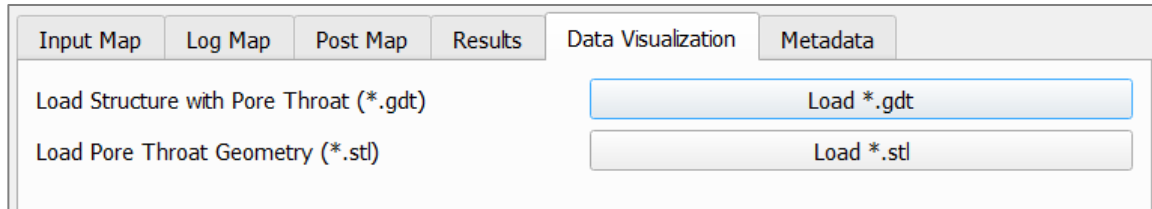

Load Structure with Pore Throat (*.gdt) loads a GDT file, where the pore throat voxels are marked with another material ID, in this example ID 03.

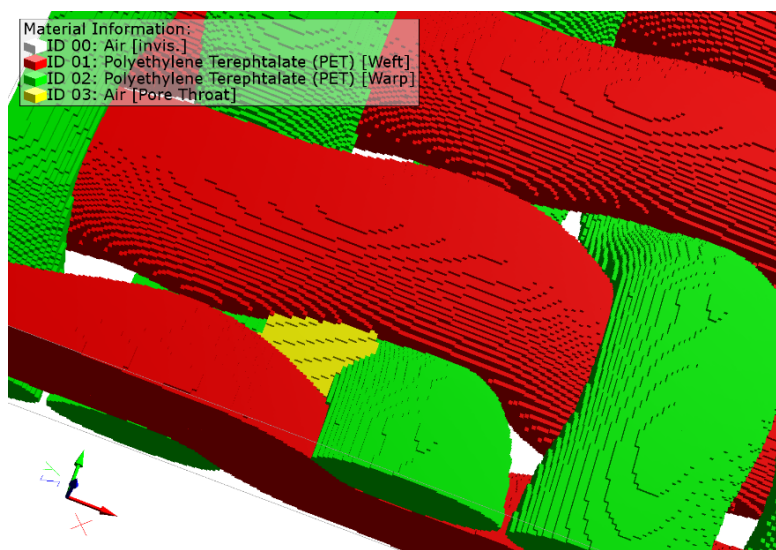

Load Pore Throat Geometry (*.stl) shows the same pore throat. In this case the pore throat is loaded as a surface triangulation, and not as marked voxels.

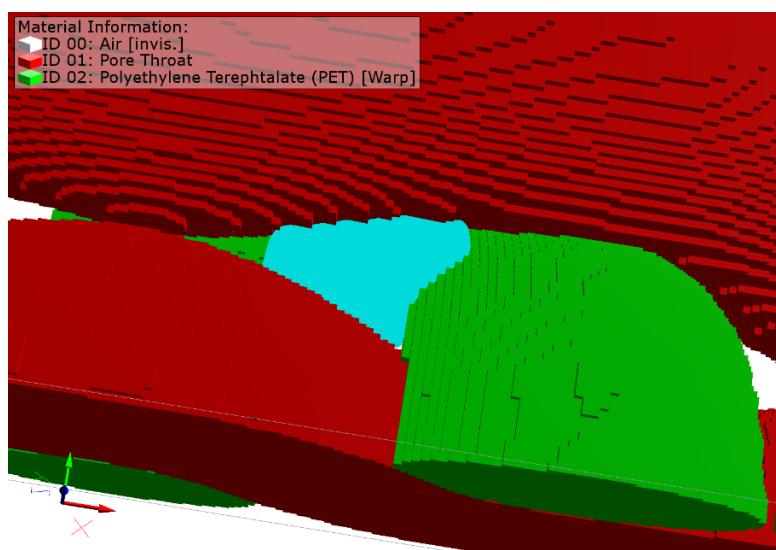

PERCOLATION PATH

This command is also available in [MatDict](#), and a description can be found in the [MatDict](#) handbook of this User Guide.

CHORD LENGTH DISTRIBUTION

This command is also available in [MatDict](#), and a description can be found in the [MatDict](#) handbook of this User Guide.


GEODESIC TORTUOSITY

This command is also available in [MatDict](#), and a description can be found in the [MatDict](#) handbook of this User Guide.

PREDEFINED


The predefined section contains a **GeoApp** for the calculation of the ASTM pore size calculation factor according to the ASTM E3278-21 standard.

The computation of the ASTM pore size calculation factor was tested and optimized on several metal wire weaves. In the ASTM test, the wire weaves are put in a containment filled with water, while air is injected from below the weave. The bubble point pressure is reached when the first air bubble pushes through the weave layer.

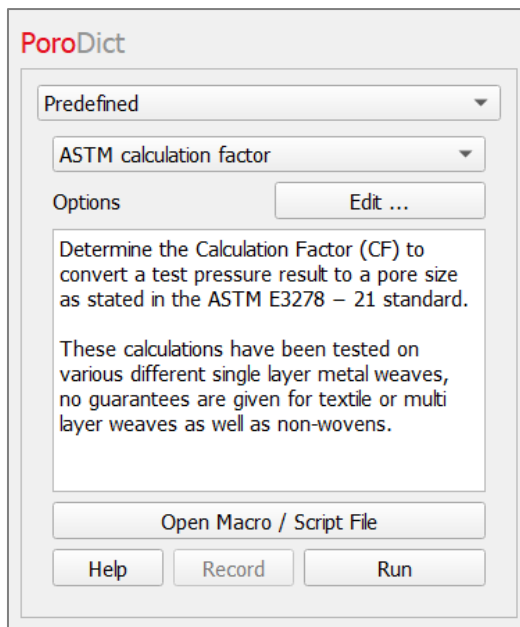

For the calculation, a precise analysis of the pore throats in the weaves is of major interest. Especially, the shape of the pore throat is a key parameter. Additionally, a correction factor for metal wire weaves is computed.

Further information about **GeoDict** in the ASTM E3278-21 can be found on the [GeoDict website](#).

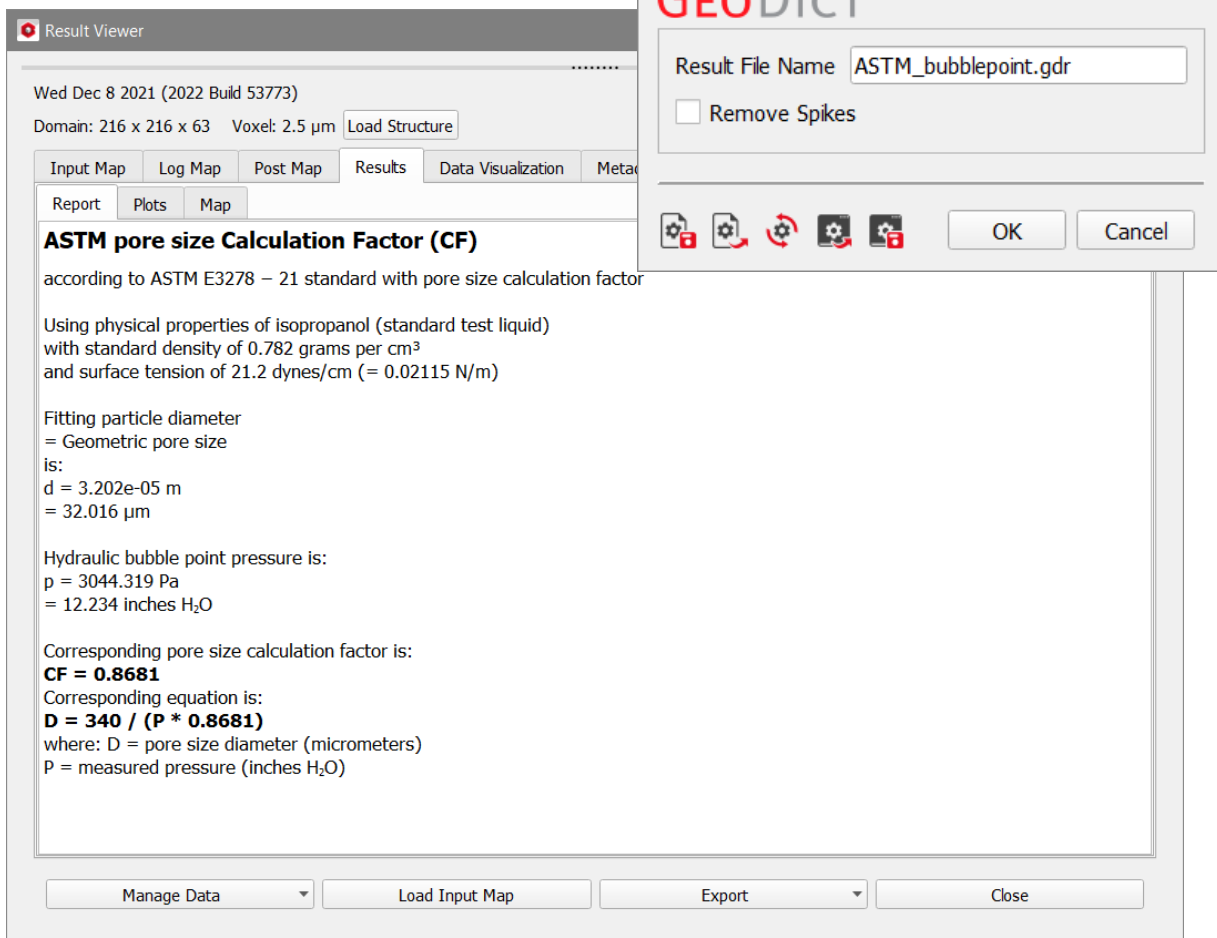

Technical
documentation:

Jürgen Becker
Janine Hilden
Barbara Planas



Math2Market GmbH

Richard-Wagner-Str. 1, 67655 Kaiserslautern, Germany
www.geodict.com